

# raM\_EModulePlus\_UI–Faceplate Help

## Navigation



Home Tab



Diagnostic Tab

## Revision Information

For Faceplate Revision information, click on the help ‘?’ button in the top toolbar of the faceplate. The faceplate revision information will be shown in the bottom of the pop-up screen.