

User Manual

Original Instructions



# EtherNet/IP Communication Modules in Logix5000 Control Systems

Catalog Numbers 5069-AENTR, 5069-AEN2TR



# Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



**WARNING:** Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



**ATTENTION:** Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.

---

**IMPORTANT** Identifies information that is critical for successful application and understanding of the product.

---

Labels may also be on or inside the equipment to provide specific precautions.



**SHOCK HAZARD:** Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



**BURN HAZARD:** Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



**ARC FLASH HAZARD:** Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

---

	<b>Preface</b>	
	Summary of Changes .....	5
	Additional Resources .....	5
	<b>Chapter 1</b>	
<b>5000 Series EtherNet/IP Communication Module Overview</b>	EtherNet/IP Communication Module Functionality.....	8
	5069 Compact I/O EtherNet/IP Adapters Overview.....	10
	Secure Digital Card .....	11
	Power a 5069 Compact I/O System .....	13
	Protected Mode .....	22
	Enter and Exit Protected Mode .....	22
	Restrictions Imposed By Protected Mode .....	22
	Perform Tasks When Not Restricted.....	23
	<b>Chapter 2</b>	
<b>Configure EtherNet/IP and USB Drivers on Your Workstation</b>	Configure the Ethernet Communication Driver in RSLinx Classic Software.....	27
	Configure the Ethernet Devices Drivers in RSLinx Classic Software .....	29
	Configure the USB Communication Driver in RSLinx Classic Software .....	31
	<b>Chapter 3</b>	
<b>Configure an EtherNet/IP Communication Module</b>	Determine Network Parameters .....	36
	Set the IP Address on the Adapter .....	38
	Out-Of-Box State .....	38
	Use the Rotary Switches to Set the IP Address .....	40
	Use the BOOTP-DHCP Tool to Set the IP Address .....	41
	Disable BOOTP/DHCP .....	43
	Use the DHCP Server to Set the IP Address .....	45
	Use RSLinx Classic Software to Set the Adapter IP Address .....	46
	Duplicate IP Address Detection .....	49
	Duplicate IP Address Resolution .....	49
	DNS Addressing .....	50
	Configure the Adapter with RSLinx Classic Software .....	51

<b>Add an EtherNet/IP Communication Module to a Controller Project</b>	<b>Chapter 4</b> Add the Module to a Project ..... 55 Time Synchronization ..... 67
<b>Use the Module on a Device Level Ring Network</b>	<b>Chapter 5</b> ..... 69
<b>Module Diagnostics</b>	<b>Chapter 6</b> Diagnostics with the Logix Designer Application ..... 71 Connection Category ..... 72 Module Info Category ..... 74 Port Configuration Category ..... 76 Time Sync Category ..... 78 Diagnostics with RSLinx Classic Software ..... 80 General Tab. .... 80 Port Diagnostics Tab ..... 81 Connection Manager Tab ..... 83 USB Tab. .... 84 EtherNet/IP Adapter Diagnostic Web Pages ..... 85 Access Web Browser Support ..... 86 Diagnostic Overview Page ..... 87 Network Settings ..... 88 Ethernet Statistics ..... 89 Ring Statistics ..... 91 Reset the Adapter ..... 92 Reset the 5069-AENTR EtherNet/IP Adapter ..... 92 Reset the 5069-AEN2TR EtherNet/IP Adapter ..... 93
<b>EtherNet/IP Communication Module Status Indicators</b>	<b>Appendix A</b> 5069-AENTR Adapter Status Indicators ..... 95 5069-AEN2TR Adapter Status Indicators ..... 98
<b>Module Tags</b>	<b>Appendix B</b> ..... 101
	<b>Index</b> ..... 105



This manual describes how to use EtherNet/IP communication modules in Logix5000™ control systems.

Make sure that you are familiar with the following:

- Use of a controller in a Logix5000 control system
- Use of an EtherNet/IP network
- Use of various software applications from Rockwell Automation

## Summary of Changes

This manual was changed to add information about the 5069-AENTR EtherNet/IP adapter.

## Additional Resources

These documents contain more information concerning related products from Rockwell Automation.

**Table 1 - Additional Resources**

Resource	Description
5069 Compact I/O Modules Specifications Technical Data, publication <a href="#">5069-TD001</a>	Provides 5069 Compact I/O™ module and 5069 Compact I/O EtherNet/IP adapter specifications.
5069 Compact I/O EtherNet/IP Adapter Installation Instructions, publication <a href="#">5069-IN003</a>	Describes how to install a 5069 Compact I/O EtherNet/IP adapter.
EtherNet/IP Media Planning and Installation Manual	Describes how to use the required media components and how to plan for, install, verify, troubleshoot, and certify your EtherNet/IP network.  This manual is available from the Open DeviceNet Vendor Association (ODVA) at: <a href="http://www.odva.org">http://www.odva.org</a> .
Ethernet Design Considerations Reference Manual, publication <a href="#">ENET-RM002</a>	Describes the following Ethernet concepts: <ul style="list-style-type: none"> <li>• Overview</li> <li>• Network layout and components</li> <li>• Network infrastructure devices</li> <li>• Network infrastructure features</li> <li>• Protocol</li> </ul>
EtherNet/IP Socket Interface Application Technique, publication <a href="#">ENET-AT002</a>	Describes the socket interface that you can use to program MSG instructions to communicate between a Logix5000™ controller and Ethernet devices. In this case, the interface is used because the Ethernet devices that do not support the EtherNet/IP application protocol. Such devices include bar code scanners, RFID readers, or other standard Ethernet devices.
EtherNet/IP Embedded Switch Technology Application Guide, publication <a href="#">ENET-AP005</a>	Describes how to install, configure, and maintain linear and Device Level Ring (DLR) networks by using Rockwell Automation® EtherNet/IP devices that are equipped with embedded switch technology.
5000 Series Digital I/O Module User Manual, publication <a href="#">5000-UM004</a>	Provides information on how to install, configure, and operate 5000 Series digital I/O modules.
5000 Series Analog I/O Module User Manual, publication <a href="#">5000-UM005</a>	Provides information on how to install, configure, and operate 5000 Series analog I/O modules.
5000 Series High-speed Counter Module User Manual, publication <a href="#">5000-UM006</a>	Provides information on how to install, configure, and operate 5000 Series high-speed counter modules.

**Table 1 - Additional Resources**

Resource	Description
Integrated Architecture and CIP Sync Configuration Application Technique, publication <a href="#">IA-AT003</a>	Provides information on CIP Sync and the IEEE 1588-2008 Precision Time Protocol.
Integrated Motion on the EtherNet/IP Network Reference Manual, publication <a href="#">MOTION-RM003</a>	Reference descriptions of the AXIS_CIP_DRIVE attributes and the Studio 5000 Logix Designer® application Control Modes and Methods
Electronic Keying in Logix5000 Control Systems Application Technique, publication <a href="#">LOGIX-AT001</a>	Describes how to use electronic keying in Logix5000 control system applications.
Network Technology web page, <a href="http://www.rockwellautomation.com/rockwellautomation/products-technologies/network-technology/overview.page?">http://www.rockwellautomation.com/rockwellautomation/products-technologies/network-technology/overview.page?</a>	Provides information on reference architectures and white papers on networking.
Industrial Automation Wiring and Grounding Guidelines, publication <a href="#">1770-4.1</a>	Provides general guidelines for installing a Rockwell Automation® industrial system.
Product Certifications website, <a href="http://www.rockwellautomation.com/rockwellautomation/certification/overview.page">http://www.rockwellautomation.com/rockwellautomation/certification/overview.page</a>	Provides declarations of conformity, certificates, and other certification details.

You can view or download publications at <http://www.rockwellautomation.com/literature/>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

## 5000 Series EtherNet/IP Communication Module Overview

Topic	Page
EtherNet/IP Communication Module Functionality	8
5069 Compact I/O EtherNet/IP Adapters Overview	10
Protected Mode	22

EtherNet/IP networks offer a comprehensive suite of messages and services for many automation applications.

These application examples use EtherNet/IP networks:

- Real-time Control
- Time Synchronization
- Motion

This open network standard uses standard Ethernet communication products to support real-time I/O messaging, information exchange, and general messaging.

EtherNet/IP networks also support CIP Safety. Such support makes the simultaneous transmission of safety and standard control data and diagnostics information over a common network possible.

## **EtherNet/IP Communication Module Functionality**


EtherNet/IP communication modules can provide the following functionality:

- Support for messaging, produced/consumed tags, and distributed I/O
- Encapsulate messages within standard TCP/UDP/IP protocol
- Share a common application layer with ControlNet and DeviceNet network protocols
- Interface via RJ45, category 5, unshielded, twisted-pair cable connectors
- Fiber connectors - Not available on all modules
- Support for full-duplex 10/100/1000 Mbps operation - Rate options are specific to modules
- No network scheduling or routing table requirements
- Communicate with Logix5000™ controllers to function as a remote gateway for I/O modules
- Option to operate in multiple EtherNet/IP topologies
- Option to operate as a Ring supervisor on a Device Level Ring (DLR) network - Not available on all modules

Figure 1 shows how Rockwell Automation® EtherNet/IP communication modules fit into a control system. In this example, the following can occur over the EtherNet/IP network:

- Controllers produce and consume tags
- Controllers initiate MSG instructions that send and receive data and configure devices
- Control of I/O modules
- Use of Integrated Motion over an EtherNet/IP network
- Workstations upload or download projects to the controllers

**Figure 1 - EtherNet/IP Communication Modules in a Control System**

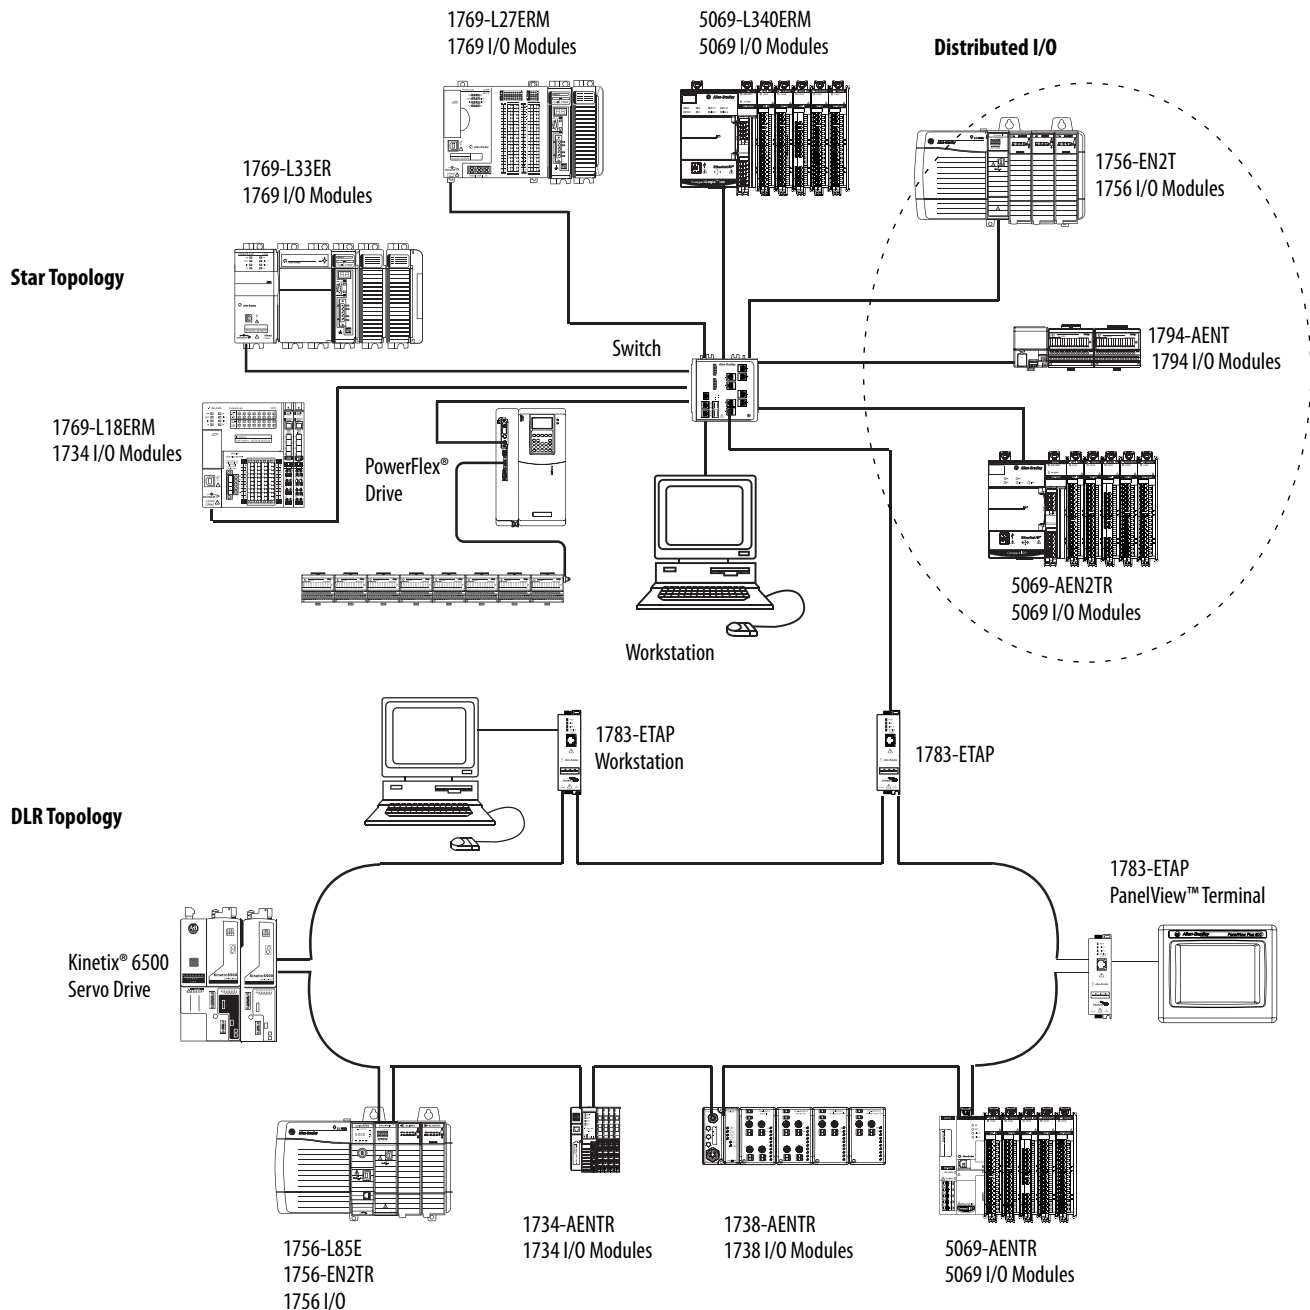

## 5069 Compact I/O EtherNet/IP Adapters Overview

A 5069 Compact I/O™ EtherNet/IP adapter performs the following functions:

- Facilitates high-speed data transfer between some Logix5000™ controllers and remote 5069 Compact I/O modules.


**IMPORTANT** You cannot use 5000 series EtherNet/IP communication modules with all Logix5000 controllers. For example, you can use the 5069 Compact I/O EtherNet/IP adapters with CompactLogix™ 5380 controllers but not with CompactLogix 5370 controllers.

For more information on the Logix5000 controllers that you can use with 5000 series EtherNet/IP communication modules, see the product descriptions at <http://www.ab.com>.


- Provides system-side power and field-side power to 5069 Compact I/O system. For more information on how the adapter powers a 5069 Compact I/O system, see [page 13](#).
- Connects to multiple EtherNet/IP network topologies, as shown in the graphics that begin on [page 9](#).
- Supports as many as 31 I/O modules in one 5069 Compact I/O system.

Figure 2 - 5069 Compact I/O Systems

5069-AENTR Adapter with  
5069 Compact I/O Modules

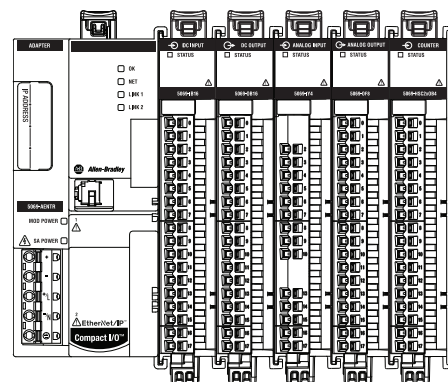

5069-AEN2TR Adapter with  
5069 Compact I/O Modules

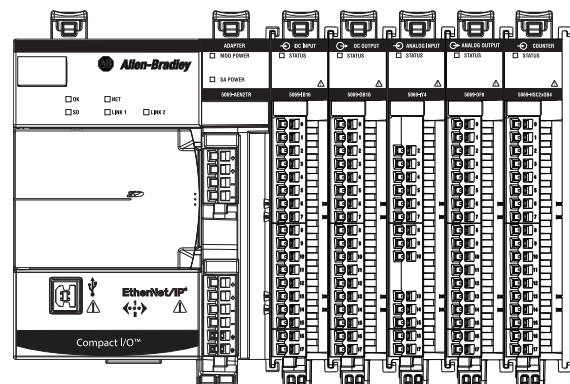

## Secure Digital Card

The 5069-AEN2TR EtherNet/IP adapter supports the use of a Secure Digital (SD) card to store all configuration data that is stored in nonvolatile memory, for example, the IP address or network communication rate for each port.

---

**IMPORTANT** The 5069-AEN2R EtherNet/IP adapter does not support the use of an SD card.


---

The adapter supports the use of a 1784-SD1 (1 GB) and 1784-SD2 (2 GB) card. You can use third-party SD cards with the controller. You can use SD cards with as much as 32 GB of memory. Keep in mind, Rockwell Automation **does not test the use of third-party SD cards** with the controller.

If you use an SD card other than those cards that are available from Rockwell Automation, unexpected results can occur. For example, you can experience data corruption or data loss.

SD cards that are not provided by Rockwell Automation can have different industrial, environmental, and certification ratings as those cards that are available from Rockwell Automation. These cards can have difficulty with survival in the same industrial environments as the industrially rated versions available from Rockwell Automation.

An SD card slot is on the front of the adapter.

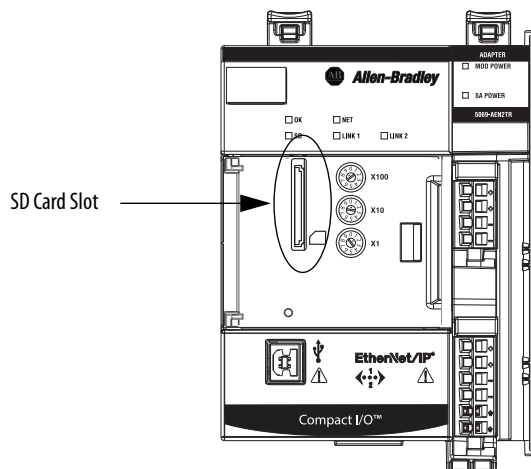

### Adapter and SD Card Interaction

The 5069-AEN2TR adapter interacts with the SD card at power-up and when the card is installed while the adapter is running.

---

**IMPORTANT** No user action is required for the interaction between the adapter and the SD card to occur.

---

Whenever configuration is written to the adapter, either at initial configuration or when changes occur, it is written to the internal memory in the adapter and the SD card.

The following apply with respect to the adapter and SD card interacting:

Conditions	Action That Occurs
<ul style="list-style-type: none"> <li>The adapter powers-up.</li> <li>The installed SD card does not contain adapter configuration data.</li> </ul>	The adapter configuration is copied from the internal memory to the SD card.
<ul style="list-style-type: none"> <li>The adapter powers-up.</li> <li>The installed SD card contains configuration data that differs from what is stored on the internal memory.</li> </ul>	<p>The configuration data on the SD card is copied to the internal memory and overwrites what was previously there.</p> <p>If the configuration data on the SD card includes an IP address that differs from the what is on the adapter, the overwrite changes the adapter IP address to match what is on the SD card.</p>
<ul style="list-style-type: none"> <li>The adapter is running.</li> <li>You insert an SD card that contains configuration data that differs from what is stored on the internal memory.</li> </ul>	<p>There is no change to the configuration data in either the internal memory or the SD card.</p> <p>A fault occurs and is indicated by the following:</p> <ul style="list-style-type: none"> <li>The message <i>SD Data Mismatch</i> scrolls across the adapter 4-character display.</li> <li>The <code>S.MemoryCardDataMismatch</code> tag changes to 1.</li> </ul> <p>We recommend that you keep the data on the internal memory and SD card the same.</p> <p>In this case, you can take one of the following actions to clear the fault and make sure the configuration in the internal memory matches that on the SD card:</p> <ul style="list-style-type: none"> <li>If you want to use the configuration that is on the SD card, cycle power. After power-up, the configuration data on the SD card is copied to the internal memory.</li> <li>If you want to use the configuration that is in the internal memory, change something in the adapter configuration. The configuration data is updated in the internal memory and then copied to the SD card. Then change the configuration on the adapter back to its previous settings. The configuration data is updated in the internal memory and then copied to the SD card.</li> </ul>
<ul style="list-style-type: none"> <li>The adapter is running.</li> <li>The adapter configuration changes.</li> </ul>	The updated configuration data is copied from the internal memory to the SD card.
The adapter firmware revision is updated.	<p>The adapter configuration data on the SD card is deleted before the update begins.</p> <p>After the firmware revision is updated, the adapter configuration is copied from the internal memory to the SD card.</p>



## Power a 5069 Compact I/O System

The 5069 Compact I/O EtherNet/IP adapters provide power to a 5069 Compact I/O system as follows:

- System-side power that powers the 5069 Compact I/O system and lets modules transfer data and execute logic.

System-side power is provided through the Module (MOD) Power connector and is passed to each module as it is added to the system.

System-side power is also known as MOD power.

- Field-side power that powers some 5069 Compact I/O modules and field-side devices that are connected to them.

Field-side power is provided through the Sensor/Actuator (SA) Power connector and is passed to each module as it is added to the system.

Field-side power is also known as SA power.

Power begins at the EtherNet/IP adapter and passes across the 5069 Compact I/O module internal circuitry via power buses. The MOD power bus and SA power bus are isolated from each other.

---

**IMPORTANT** We recommend that you use a separate external power supply for the MOD power and SA power, respectively.

If you use one external power supply and power is lost from that supply, the system loses both MOD power and SA power. That is, system-side and field side power, respectively, is lost.

If you use separate external power supplies, the loss of power from one external power supply does not affect the availability of power from the other supply. For example, if separate external power supplies are used and SA power is lost, MOD power remains available for the 5069 Compact I/O EtherNet/IP adapter and 5069 Compact I/O modules.


---

### Power Connectors for Each Adapter

You connect external power supplies to removable terminal blocks (RTBs) to provide MOD power and SA power. The 5069 Compact I/O EtherNet/IP adapters use different RTBs to connect power.


The 5069-AENTR adapter uses a 5-terminal Power RTB to connect MOD power and SA power. Both power types are provided to the system via one RTB.

**Figure 3 - 5069-AENTR EtherNet/IP Adapter Power Connector**

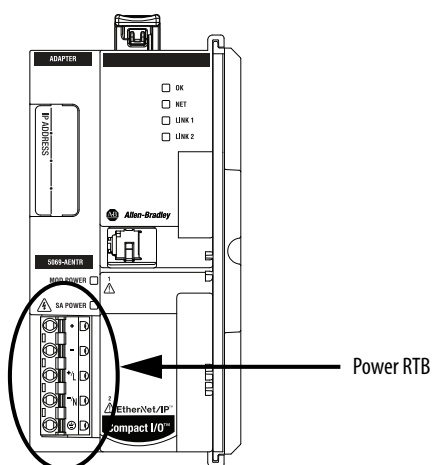

The 5069-AEN2TR adapter uses two RTBs to connect MOD power and SA power. You connect an external power supply to the MOD power RTB to provide MOD power. You connect an external power supply to the SA power RTB to provide SA power.

**Figure 4 - 5069-AEN2TR EtherNet/IP Adapter Power Connectors**

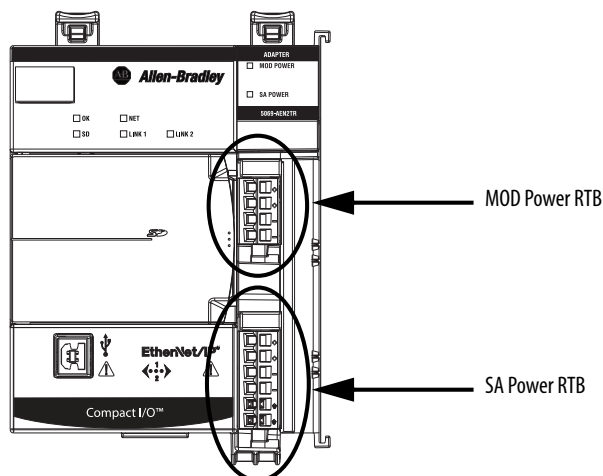

For more information on how to connect MOD power and SA power, see the 5069 Compact I/O EtherNet/IP Adapter Installation Instructions, publication [5069-IN003](#).

### *5069 Compact I/O System MOD Power Bus*

MOD power is a DC power source that is required to operate the 5069 Compact I/O system. Remember the following:

- A 5069 Compact I/O system uses only one MOD power bus.
- Every module in the system draws current from the MOD power bus and passes the remaining current to the next module.
- You must limit the MOD power source to 10 A, max, at 18...32V DC.
- We recommend that you use an external power supply that is adequately sized for the total MOD power bus current draw in the system.

For example, if the total MOD power current draw is 5 A, you can use a MOD power supply that is limited to 5 A.

You must consider **current inrush requirements** when you calculate the total MOD power bus current draw in the system.

When the MOD power source is turned on, that is, a 5069 Compact I/O system receives system-side power, the following occurs.

1. The 5069 Compact I/O EtherNet/IP adapter draws current from the MOD power bus current and passes the remaining current through to the next module.
2. The next module draws MOD power bus current and passes the remaining current through to the next module.
3. The process continues until MOD power bus current needs are met for all modules in the system.

For more information on the current that the 5069 Compact I/O modules draw from the MOD power bus, see the 5069 Compact I/O Modules Specifications Technical Data, publication [5069-TD001](#).

### *5069 Compact I/O System SA Power Bus*

SA power provides power to devices that are connected to some of the 5069 Compact I/O modules in the CompactLogix 5380 system. Remember the following:

- Some 5069 Compact I/O modules draw current from the SA power bus and pass the remaining current to the next module.
- Some 5069 Compact I/O modules only pass current along the SA power bus to the next module.
- A 5069 Compact I/O system can have multiple SA power buses. You use a 5069-FPD field potential distributor to establish a new SA power bus. The new SA power bus is isolated from the SA power bus to its left in the system.

For more information on 5069-FPD field potential distributors, see [page 19](#).

- If your system includes AC and DC modules that require SA power, you must use a 5069-FPD field potential distributor to establish a new SA power bus.

You install one set of the same module types, for example, DC modules, to the first SA power bus. Then you install the other set, for example, AC modules to the second SA power bus. That is, the SA power bus to the right of the 5069-FPD field potential distributor.

The SA power source limitations described previously apply to each isolated SA power bus separately.

- You must limit the SA power source to one of the following:
  - If you use **DC voltage**, you must limit the SA power source to **10 A, max at 18...32V DC**.
  - If you use **AC voltage**, you must limit the SA power source to **10 A, max at 18...240V AC**.

- We recommend that you use an external power supply that is adequately sized for the total SA power bus current draw in the system.

For example, if the total SA power current draw is 4 A, you can use an SA power supply that is limited to 4 A.

You must consider **current inrush requirements** when you calculate the total SA power bus current draw in the system.

- Connections to an SA power bus use a **shared common**. All inputs that draw current from an SA power bus to power field-side devices have a return through circuitry to the SA - terminal on the SA power connector.

---

**IMPORTANT** Each SA power bus has a shared common unique to that bus because SA power buses are isolated from each other. That is, the SA power bus that the adapter establishes has a shared common. If you use a 5069-FPD field potential distributor to establish a new SA power bus in the system, the second bus has its own shared common for modules that draw current from it.

---

When the SA power source is turned on, that is, a 5069 Compact I/O system receives field-side power, the following occurs.

1. The 5069 Compact I/O EtherNet/IP adapter draws current from the SA power bus current and passes the remaining current through to the next module.
2. The next module completes one of the following tasks.
  - If the module uses SA power to power a field-side device, the module draws current from the SA power bus and passes the remaining current through to the next module.
  - If the module does not use SA power bus current, the module passes the remaining current through to the next module.
3. The process continues until all SA power bus current needs are met for the modules on the SA power bus.

For more information on the current that the 5069 Compact I/O modules draw from the SA power bus, see the 5069 Compact I/O Modules Specifications Technical Data, publication [5069-TD001](#).

### Track SA Power Bus Current Draw

We recommend that you track the SA power bus current draw, max, per module, and collectively for the 5069 Compact I/O system.


Consider the following with this example:

- The values in this example represent a worst-case calculation. That is, all modules that draw SA power bus current, draw the maximum available on the module.
- Not all modules that are shown in [Figure 5](#) use SA power bus current. For example, the 5069-ARM and 5069-OW4I modules only pass SA power bus current to the next module. Some other 5069 Compact I/O modules do not use SA power bus current, but are not shown in the graphic, for example, the 5069-OB16 module.
- System SA power bus current, max, is calculated as each module draws SA power bus current.

In the example in [Figure 5](#), after the 5069-IB16 module in slot 1 draws SA power bus current, the system SA power bus current, max, is 138 mA. After the 5069-IB16 module in slot 2 draws SA power bus current, the system SA power bus current draw is 266 mA.

This process continues until the system SA power bus current, max, is 1.222 A.

**Figure 5 - 5069 Compact I/O System - Calculate SA Power Bus Current Draw**

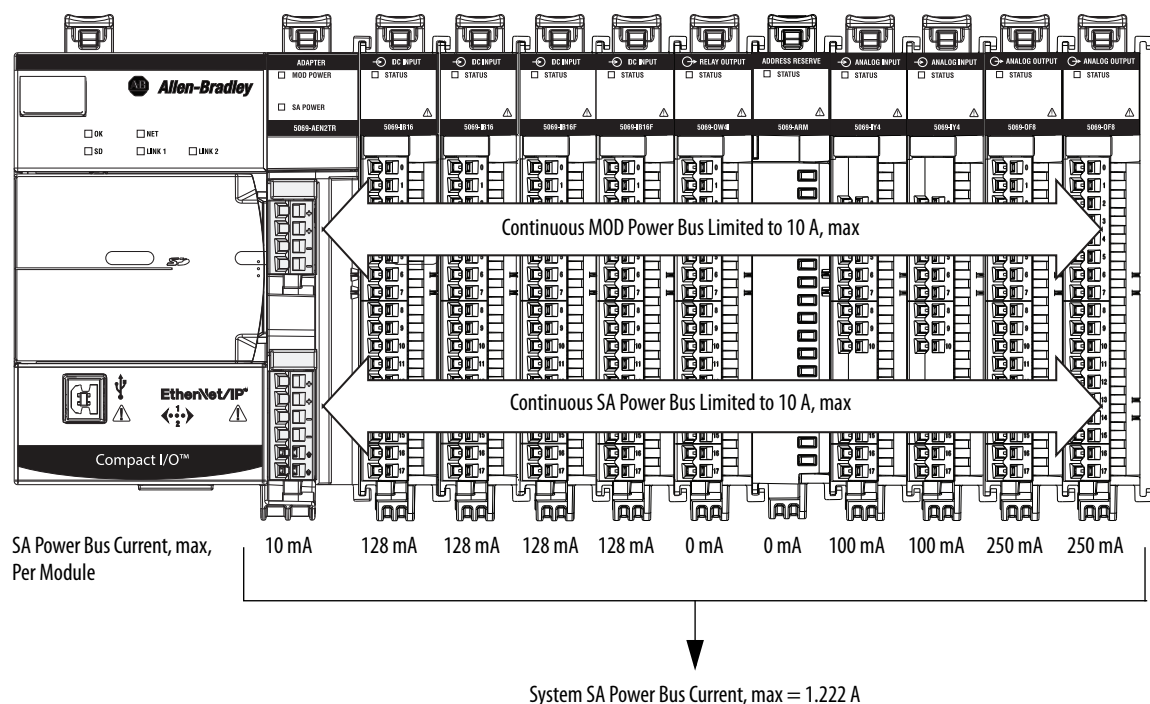

### *5069-FPD Field Potential Distributor Creates Additional SA Power Buses*

The 5069-FPD Field Potential Distributor lets you change the field-side power distribution source for 5069 Compact I/O modules to the right of the field power distributor. The field potential distributor passes MOD power bus signals through to the next module in the system.


You can use a 5069-FPD field potential distributor to add an SA power bus to a 5069 Compact I/O system. The field potential distributor blocks the current that passes across the SA power bus to the left of the field potential distributor. It then establishes a new SA power bus for modules to the right.

The SA power bus that a field potential distributor establishes functions in the same way as the SA power bus that a 5069 Compact I/O EtherNet/IP adapter establishes, as described on [page 16](#).

Examples of system configurations that use multiple SA power buses include:

- The modules in the system collectively draw more than 10 A of SA power. That is, the maximum current that one SA power bus can provide.
- The modules in the system must be isolated according to module types, such as digital I/O and analog I/O modules.
- The modules in the system are isolated according to the type of field-side device to which they are connected. For example, you can separate modules that are connected to field-side devices that require DC voltage for SA power from modules that are connected to field-side devices that require AC voltage for SA power.

**Figure 6 - 5069-FPD Field Potential Distributor**

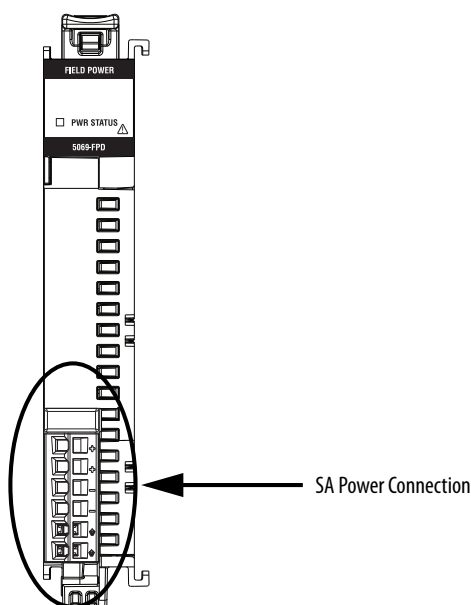


Create a New SA Power Bus in a 5069 Compact I/O System


Figure 7 show examples when a 5069-FPD field potential distributor to create a second SA power bus.

Figure 7 - 5069 Compact I/O System - Create a New SA Power Bus

In this example, a 5069-FPD field potential distributor is used to create a new SA power bus so the digital I/O modules are separated from the analog I/O modules.

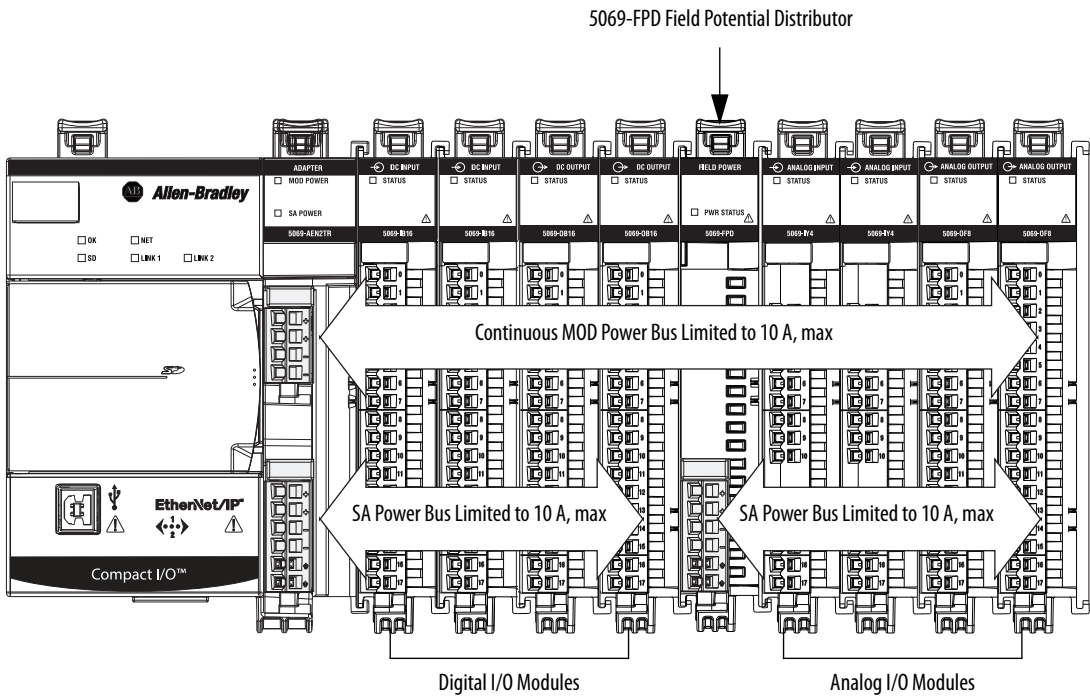

In this example, a 5069-FPD field potential distributor is used to create a new SA power bus so the DC type I/O modules are separated from the AC type I/O modules.

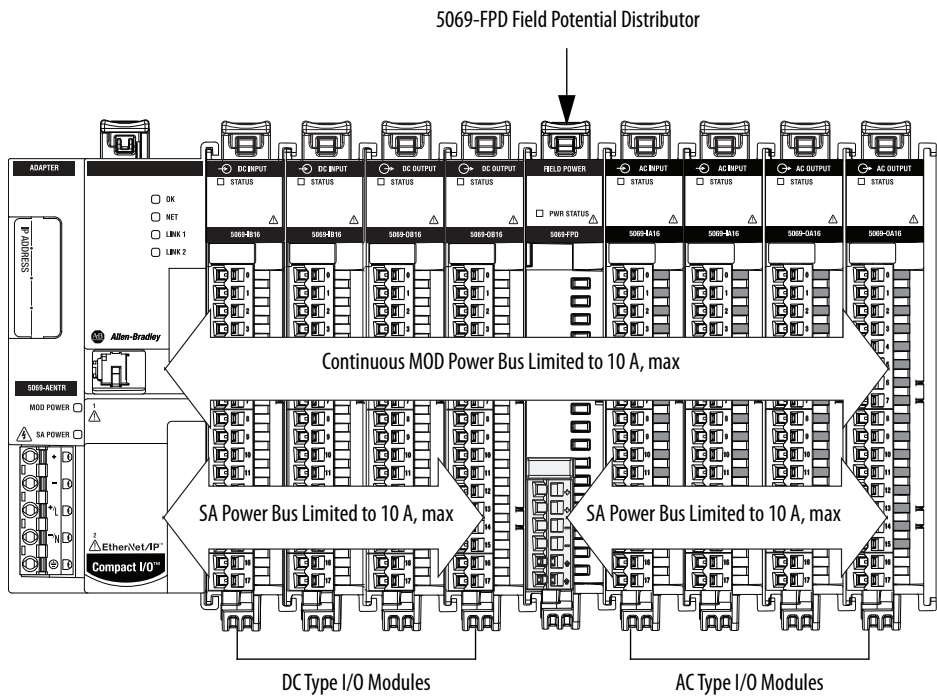



### *SA Power - Additional Notes*

Remember the following:

- We recommend that you use a separate power supply for the SA power connection from the power supply that is used with the MOD power connection.
- The actual current in a 5069 Compact I/O system changes based on the operating conditions at a given time.

For example, the SA power bus current draw on some modules is different if all channels power field devices or half of the channels power field devices.

- Not all 5069 Compact I/O modules use SA power.

For example, the 5069-ARM, 5069-OB16, 5069-OB16F, 5069-OW4I, and 5069-OX4I modules do not use SA power.

- Some 5069 Compact I/O modules use field-side power but do not draw it from a SA power bus. The modules receive field-side power from an external power supply that is connected to the module RTB.

For example, the 5069-OB16 and 5069-OB16F modules use Local Actuator (LA) terminals, that is, LA+ and LA- terminals for all module channels.

## Protected Mode

Protected Mode is a security enhancement that is automatically triggered as soon as one of the following occur:

- The adapter bridges I/O connections.
- The adapter is a target of I/O connections.

Protected mode is a state where the device is operational, but has implemented defenses against disruptive changes that would take the product out of service for the process.

This security enhancement occurs on the I/O module level and helps prevent unauthorized configuration changes that can affect system behavior and cause unintended and unforeseen changes.

---

**IMPORTANT** Protected Mode is only available on the 5069-AENTR adapter.

---

## Enter and Exit Protected Mode

The adapter enters Protected Mode as soon as I/O connections are established through the adapter. The adapter exits Protected Mode as soon as all I/O connections through the adapter are stopped.

## Restrictions Imposed By Protected Mode

Protected mode prevents access to services that are not required after the device is configured and in normal operation. Protected mode disables features that can make the device vulnerable to disruptive actions. By doing so, Protected mode helps to reduce the attack surface.

---

**IMPORTANT** Protected mode is not configurable.

---

When it is in Protected Mode, the adapter prevents execution of the following tasks:


- Changing Ethernet configuration settings, such as port speed.
- Changing IP settings, such as IP address, mask, and DHCP mode.
- Updating the adapter firmware revision.
- Disabling or re-enabling external product ports.
- Performing remote adapter resets.

## Perform Tasks When Not Restricted


If the adapter is in Protected Mode and you attempt to perform any of the restricted tasks, you are alerted that such a task cannot be performed because the adapter is in Protected Mode.

The following are example alerts that result from an attempt to set IP values on the adapter when the adapter is in Protected Mode:

- Logix Designer application

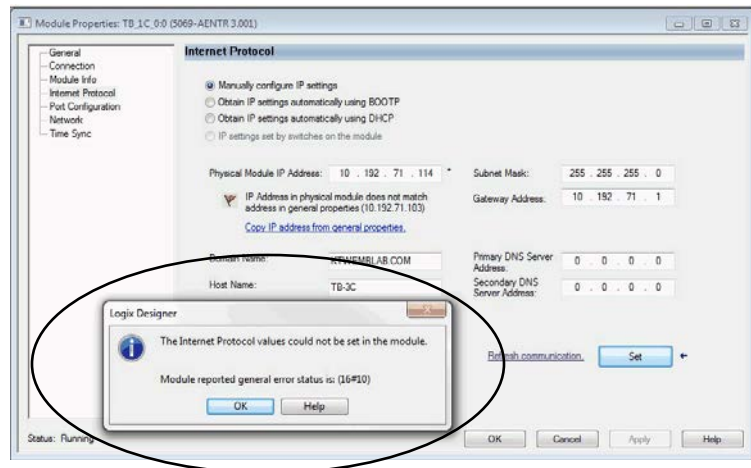

- RSLink software

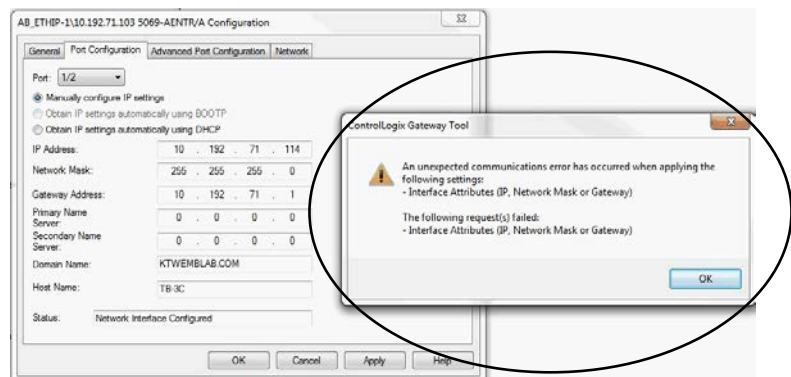

If the adapter is not in Protected Mode, the adapter does not reject attempts to perform the tasks that are described previously.

For example, after the adapter is initially powered up, but no I/O connections are established yet, the adapter is not in Protected Mode. You can attempt to update the adapter firmware revision and the adapter does not reject the attempt.

**TIP** If the adapter enters Protected Mode each time the adapter powers up, check application controllers to determine if there are active I/O connections that are opened via the adapter.

## Configure EtherNet/IP and USB Drivers on Your Workstation

Topic	Page
Configure the Ethernet Communication Driver in RSLinx Classic Software	27
Configure the USB Communication Driver in RSLinx Classic Software	31

To use RSLinx® Classic software with your adapter, you must use a communication driver that corresponds to the cable connections. For example, you must configure an Ethernet driver to communication with the adapter over an EtherNet/IP network.

To communicate over a USB connection, RSLinx Classic software automatically configures a USB driver when the workstation recognizes that a USB cable is connected to it. No action is required on your part.

A workstation needs the drivers to perform these tasks:

- Upload and download Logix Designer application projects to Logix5000™ controllers over an EtherNet/IP network
- Collect controller data for electronic operator interfaces, for example, PanelView™ Plus terminals, and visualization software, for example, FactoryTalk® View software
- Update adapter firmware
- Set or change the IP address, if you do not use one of the other tools described in [Set the IP Address on the Adapter on page 38](#)
- Configure the adapter

Remember the following when you use the RSLinx Classic software communication drivers:

- EtherNet/IP driver:
  - Supports runtime communications
  - Requires that the workstation is properly connected to the EtherNet/IP network
  - Supports communications over longer distances when compared to the USB driver
- Ethernet devices driver:
  - Requires that you configure the IP addresses to which the software browses and, therefore, the devices with which the adapter communicates
- USB driver:
  - Convenient method to connect to an unconfigured adapter and configure the Ethernet port
  - Convenient method to connect to an adapter when the Ethernet port configuration is unknown
  - Convenient method to update the adapter firmware
  - Not intended for runtime connections; it is a temporary-use only connection with a limited cabling distance

---

**IMPORTANT**    You can use a USB driver only with a 5069-AEN2TR adapter. The 5069-AENTR adapter does not have a USB connection port

---


## Configure the Ethernet Communication Driver in RSLinx Classic Software

Before you add an Ethernet driver, confirm that these conditions exist:

- The workstation is properly connected to the EtherNet/IP network.
- The workstation IP address and other network parameters are configured correctly.


To configure the EtherNet/IP driver, follow these steps.

1. From the Communications menu, choose Configure Drivers.

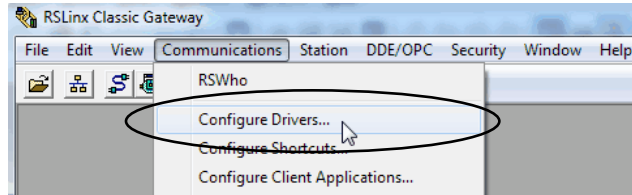


The Configure Drivers dialog box appears.

2. From the Available Driver Types pull-down menu, choose EtherNet/IP Driver.
3. Click Add New.

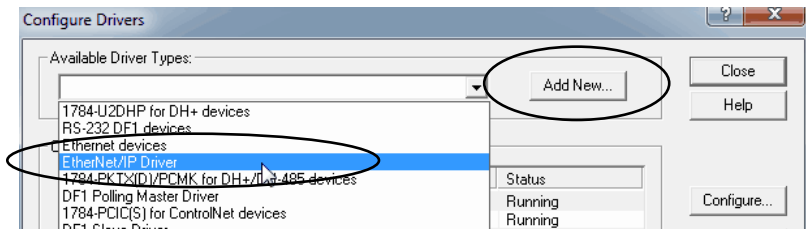

The Add New RSLinx Driver dialog box appears.

4. Type a name for the new driver and click OK.

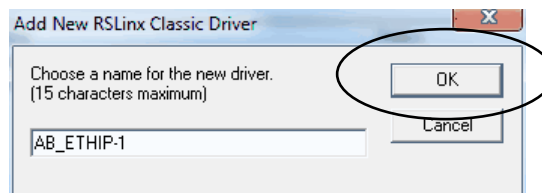


The Configure driver dialog box appears.

5. Click Browse Local Subnet.


**TIP** To view devices on another subnet or VLAN from the workstation running RSLinx Classic software, click Browse Remote Subnet.

6. Select the desired driver, and click OK.

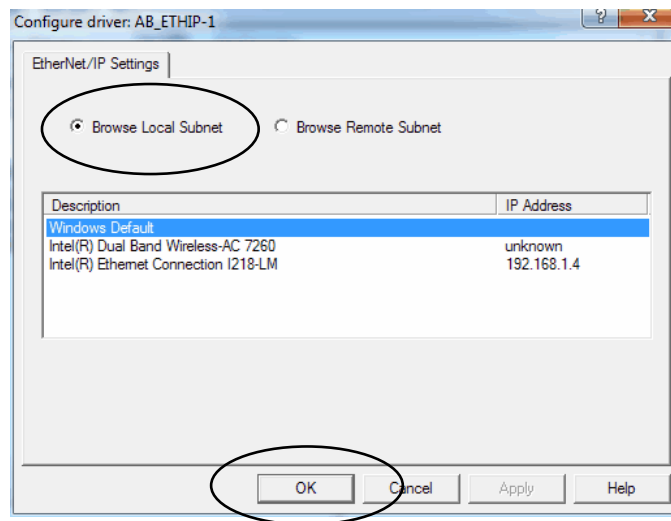

The new driver is available on the Configure Drivers dialog box.

7. Click Close.

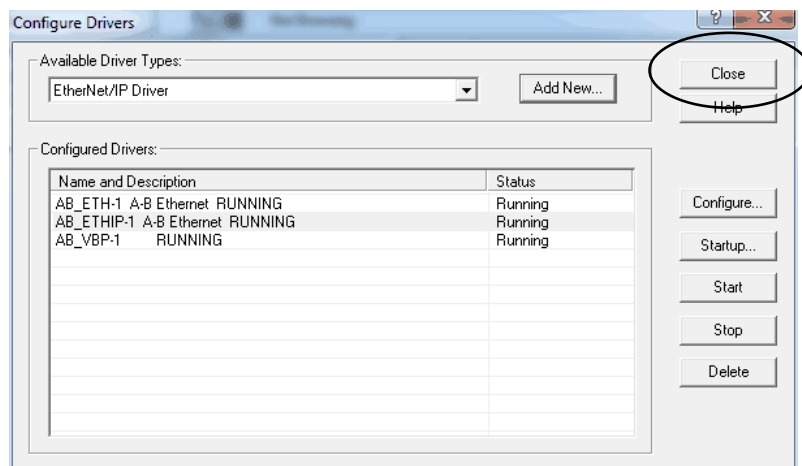




## Configure the Ethernet Devices Drivers in RSLinx Classic Software

The following conditions must exist to configure an Ethernet devices driver:

- The workstation is connected to another EtherNet/IP network than the target controller.
- The IP address and other network parameters are correctly configured on the workstation.


To configure the Ethernet devices driver, complete the following steps.

1. From the Communications pull-down menu, choose Configure Drivers.

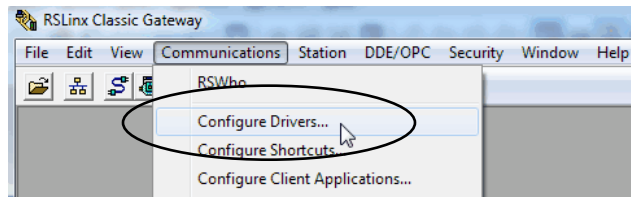


The Configure Drivers dialog box appears.

2. From the Available Driver Types pull-down menu, choose Ethernet devices.
3. Click Add New.

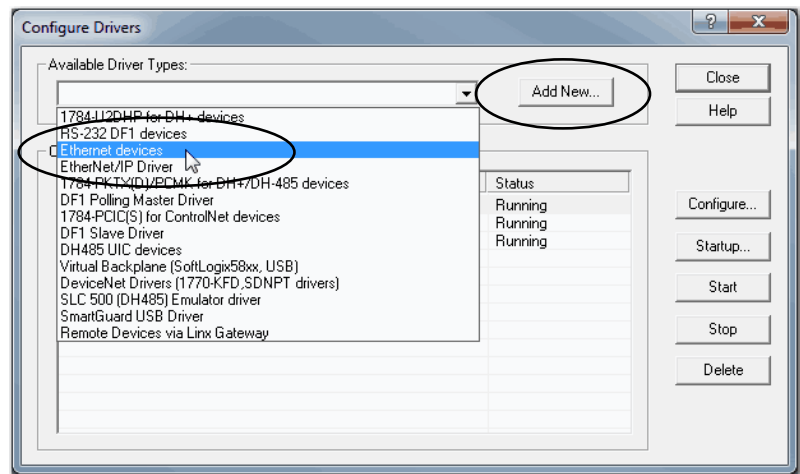

The Add New RSLinx Driver dialog box appears.


4. You can use the default name for the new drive or type a new name, and click OK.

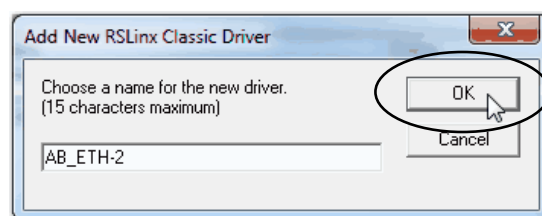

The Configure driver dialog box appears.

5. On the Configure driver dialog box, enter a host name for each station to which RSLinx Classic software browses.

The host name is the IP address for the device.

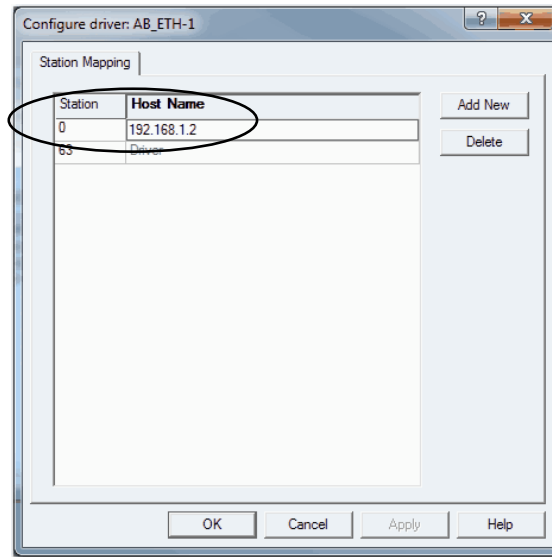

6. Click Add New to add stations and give each a host name.
7. When you finish adding stations, click OK.
8. On the Configure Drivers dialog box, click Close.

## Configure the USB Communication Driver in RSLinx Classic Software

In RSLinx Classic software, version 3.80.00 or later, a USB driver automatically appears in the software when you connect the USB cable from your workstation to the controller.

The USB driver can take a moment to appear in RSLinx Classic software.

---

**IMPORTANT** EtherNet/IP drivers remain visible in RSLinx Classic software after they are configured regardless of whether they are in use or not.

A USB driver appears in RSLinx Classic software only when a USB cable is connected between the workstation and the controller.

Once the cable is disconnected, the driver disappears from RSLinx Classic software.

---



---

**ATTENTION:** The USB port is intended for temporary, local programming purposes only and is not intended for permanent connection. The USB cable is not to exceed 3.0 m (9.84 ft) and must not contain hubs.

5069-AEN2TR EtherNet/IP adapter only.

---



---

**WARNING:** Do not use the USB port in hazardous locations.

5069-AEN2TR EtherNet/IP adapter only.

---

---

**IMPORTANT** Do not simultaneously load firmware for multiple modules through a USB port. If you do, one or more of the firmware loads can fail in the middle of the loading process.

---

If you use the RSLinx Classic software, version 3.80.00 or later, and a USB driver does not appear automatically, complete the following steps.

1. Connect one end of the USB cable to your workstation, and the other end to the USB port on the communication module.

The RSLinx Found New Hardware Wizard dialog box appears.



2. Click Install the software automatically (recommended).

3. Click Next.




These dialog boxes appear consecutively.

4. Click Finish.

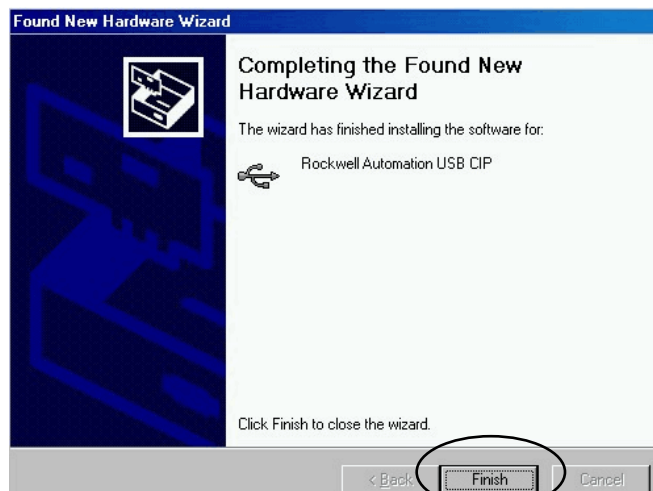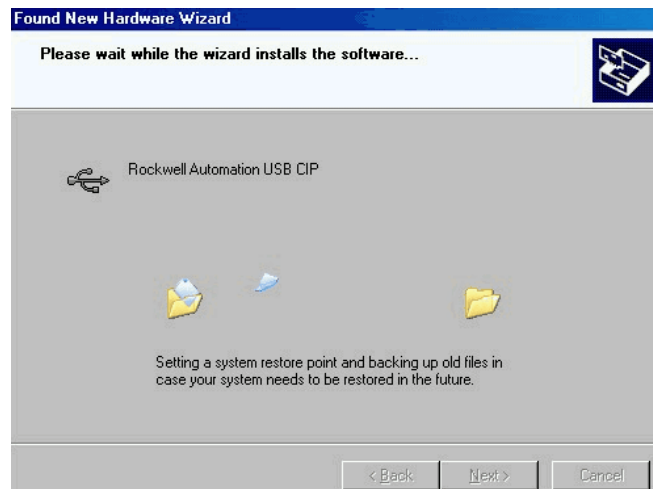

5. In RSLinx Classic software, from the Communications menu, click RSWho.

The RSLinx Workstation organizer appears, and your module appears under two different drivers, a virtual chassis and the USB port.

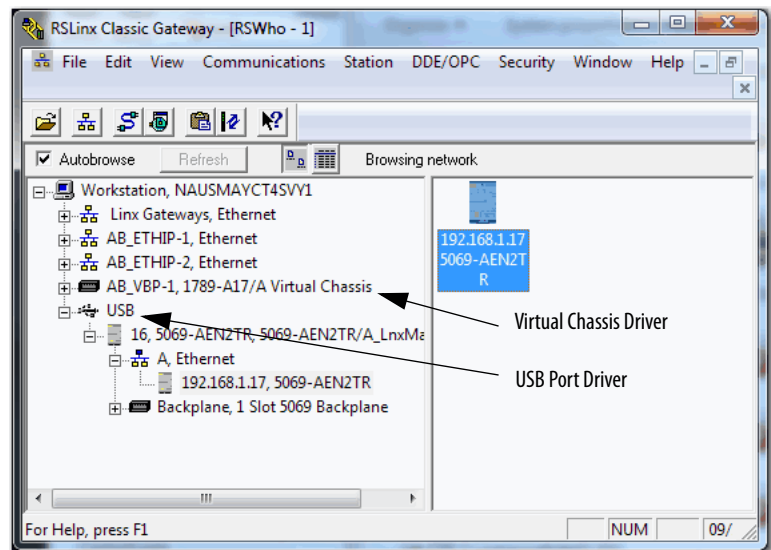

## **Notes:**

## Configure an EtherNet/IP Communication Module

Topic	Page
Determine Network Parameters	36
Set the IP Address on the Adapter	38
Duplicate IP Address Detection	49
Duplicate IP Address Resolution	49
DNS Addressing	50
Configure the Adapter with RSLinx Classic Software	51



**ATTENTION:** You can use a DHCP server that is configured to always assign the same IP address to specific devices when they appear on the EtherNet/IP network and request an IP address.

If your system does not use a DHCP server that assigns the same IP address for specific devices, we **strongly recommend** that you assign the EtherNet/IP communication module a fixed IP address. Do not set the IP address dynamically. That is, do not use the Obtain IP settings automatically by using DHCP.

When an EtherNet/IP communication module uses Obtain IP settings automatically by using DHCP, the IP address for that adapter is cleared with each power cycle. If the same IP address is not automatically assigned to the module when it requests a new IP address, the module can be assigned another IP address than what was used before cycling power.

The use of a new IP address can result in such issues as a Duplicate IP Address condition or configuration faults because the module IP address differs from what is stored in a Logix Designer application project.

Failure to observe this precaution can result in unintended machine motion or loss of process control.

## Determine Network Parameters

To operate an EtherNet/IP network, you must define these parameters.

EtherNet/IP Network Parameter	Description
IP address	<p>The IP address uniquely identifies the module. The IP address is in the form <i>.xxx.xxx.xxx</i> where each <i>xxx</i> is a number from 000 . . . 254.</p> <p>There are some reserved values that you <b>cannot use as the first octet</b> in the address. These numbers are <b>examples</b> of values you cannot use:</p> <ul style="list-style-type: none"> <li>• 001.<i>xxx.xxx.xxx</i></li> <li>• 127.<i>xxx.xxx.xxx</i></li> <li>• 223 to 255.<i>xxx.xxx.xxx</i></li> </ul> <p>The specific reserved values that cannot be used vary according to the conditions of each application. The previous values are only examples of reserved values.</p>
Subnet mask	<p>Subnet addressing is an extension of the IP address scheme that allows a site to use one network ID for multiple physical networks. Routing outside of the site continues by dividing the IP address into a net ID and a host ID via the class. Inside a site, the subnet mask is used to redivide the IP address into a custom network ID portion and host ID portion. This field is set to 0.0.0.0 by default.</p> <p>If you change the subnet mask of an already-configured module, you must cycle power to the module for the change to take effect.</p>
Gateway	<p>A gateway connects individual physical networks into a system of networks. When a node communicates with a node on another network, a gateway transfers the data between the two networks. This field is set to 0.0.0.0 by default.</p> <p>If you change the gateway of an already-configured module, you must cycle power to the module for the change to take effect.</p>

If you use DNS addressing, or reference the module via host name in MSG instructions, define these parameters.

**Table 2 - EtherNet/IP Network Parameters for DNS Addressing**

EtherNet/IP Network Parameter	Description
Host name	A host name is part of a text address that identifies the host for a module. The full text address of a module is <i>host_name.domain_name</i> .
Domain name	<p>A domain name is part of a text address that identifies the domain in which the module resides. The full text address of a module is <i>host_name.domain_name</i>. The domain name has a 48-character limit.</p> <p>If you specify a DNS server, you must type a domain name.</p>
Primary DNS server address	<p>The server address identifies any DNS servers that are used in the network. You must have a DNS server that is configured if you specified a domain name or a host name in the module configuration. The DNS server converts the domain name or host name to an IP address that is used by the network.</p> <p><b>IMPORTANT:</b> This applies to only the 5069-AEN2TR adapter. The 5069-AENTR adapter does not support DNS client use. Therefore, the 5069-AENTR adapter cannot convert the domain name or host name to an IP address that is used by the network.</p> <p>For more information on DNS addressing, see <a href="#">page 50</a>.</p>
Secondary DNS server address	



Check with your Ethernet network administrator to determine if you must specify these parameters.

Consider these factors when you determine how to set the network IP address:

- Network isolation from or integration into the plant/enterprise network
- Network size - For large networks or isolated networks, it can be more convenient to use DHCP server. The DHCP server also limits the possibility that duplicate IP addresses are assigned.

For more information, see [page 35](#).

- Company policies and procedures that deal with plant floor network installation and maintenance
- Level of involvement by IT personnel in plant-floor network installation and maintenance
- Type of training that is offered to control engineers and maintenance personnel

If you use BOOTP/DHCP server in an uplinked subnet where an enterprise DHCP server exists, the enterprise server can assign an address before the BOOTP/DHCP server. In this case, you must disconnect from the uplink to set the address and configure the module to retain its static address before reconnecting to the uplink. This process is not a problem if you configured node names in the module and leave DHCP enabled.

## Set the IP Address on the Adapter

You must set the IP address on a 5069 Compact I/O™ EtherNet/IP adapter for the adapter to operate on an EtherNet/IP network.

The following are adapter conditions in which you set the IP address:

- Set the IP address for the **first time** after it powers up in the out-of-box state.

---

**IMPORTANT** The adapter powers up in the out-of-box the first time you install it. However, the adapter also after power is cycled and the adapter is configured to clear its IP address after power is cycled.

---

- Change the IP address after it has been set.

### Out-Of-Box State

When the adapter is in the out-of-the-box state, the following apply regarding IP addresses:

- The adapters ship without an IP address.
- The rotary switches on the adapter are set as follows:
  - 5069-AENTR adapter - 999
  - 5069-AEN2TR adapter - 000
- The adapter is DHCP-enabled. That is, the adapter is configured to obtain an IP address via a DHCP server.

If there is no DHCP server or the DHCP server is not configured to set the IP address, you must set the IP Address manually.

- The adapter issues requests for an IP address via DHCP until an IP address is set by using one of the tools that are described in this section.
- The adapter is configured so that you must set the IP address each time that power is cycled.

You can change the adapter configuration so that you are not required to set an IP address each time that power is cycled.


You can use these tools to set the IP address:

- Rotary switches - See [page 40](#)
- BOOTP-DHCP tool - See [page 41](#).
- DHCP server - See [page 41](#).
- RSLinx® Classic software - See [page 46](#).

Each tool has connection requirements to set the IP address via that tool. For more information, see the detailed descriptions of each tool.

[Figure 8](#) shows the process that the module uses to set the IP address.

**Figure 8 - How the Module IP Address is Set**

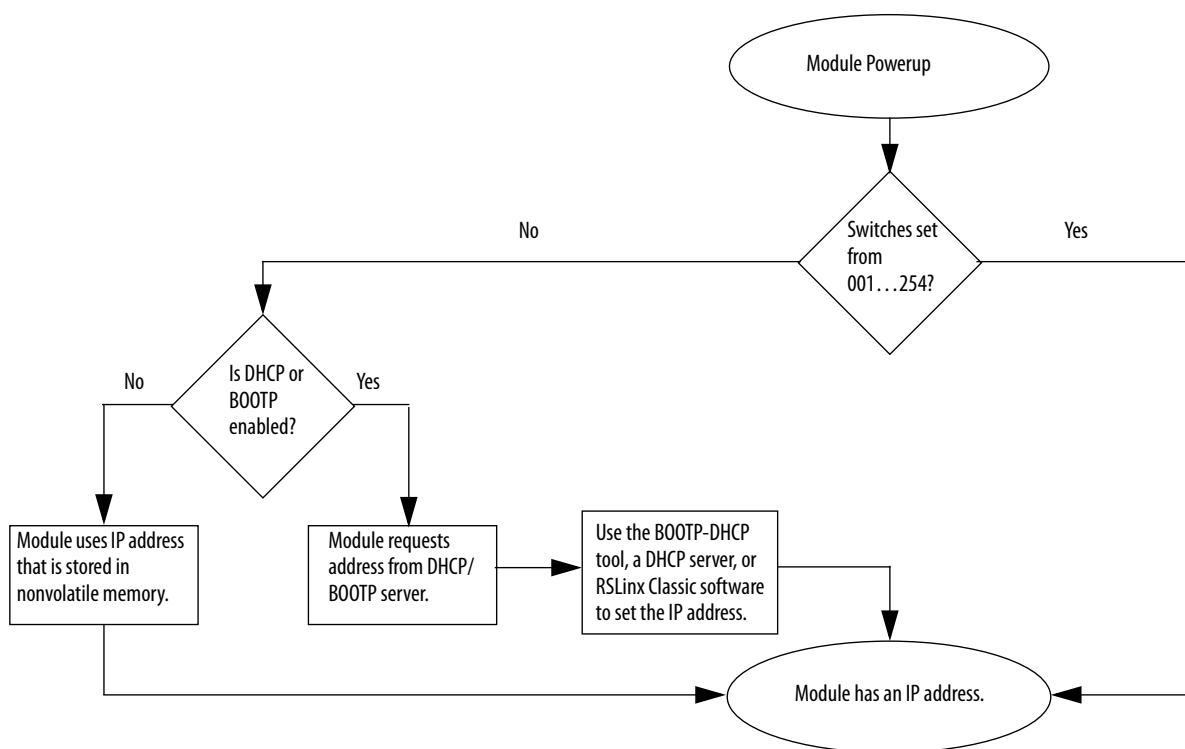

## Use the Rotary Switches to Set the IP Address

If the network uses 192.168.1.x, use the rotary switches on the adapter to set the last octet of network IP address. Valid numbers range from 001...254.

---

**IMPORTANT** The rotary switches only set the IP address when power is cycled.

---




**WARNING:** When you change switch settings while power is on, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

When you press the reset button while power is on, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.


**IMPORTANT:** The warnings apply to only the 5069-AEN2TR adapter only. You cannot change the rotary switches on the 5069-AENTR without removing power, and the 5069-AENTR adapter does not have a reset button.

---

- 5069-AENTR - The left-most switch represents the first digit in the octet, the middle switch represents the second digit, and the right-most switch represents the third digit.

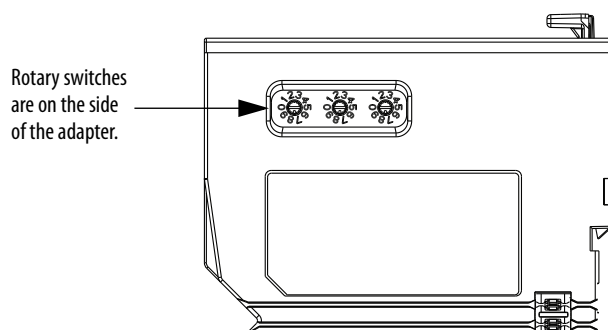

- 5069-AEN2TR - The bottom switch represents the first digit in the octet, the middle switch represents the second digit, and the top switch represents the third digit.

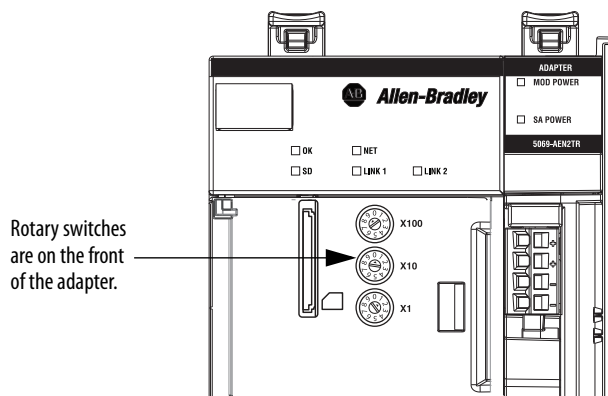

## Use the BOOTP-DHCP Tool to Set the IP Address

The BOOTP/DHCP tool is a standalone server that you can use to set an IP address. The BOOTP/DHCP tool sets an IP address and other Transport Control Protocol (TCP) parameters.

You can use the BOOTP/DHCP tool to set the IP address when the adapter powers up in the out-of-box state. That is, the rotary switches are not set to a valid IP address, and the adapter is DHCP enabled.

Access the BOOTP/DHCP tool from one of these locations:

- Programs > Rockwell Software > BOOTP-DHCP Tool > BOOTP-DHCP Tool
- Tools directory on the Studio 5000® environment installation CD

---

**IMPORTANT** Before you start the BOOTP/DHCP tool, remember the following:

- Make sure that you have the hardware (MAC) address of the adapter.

The hardware address is on a sticker on the side of the communication module and uses an address in a format similar to the following:

00-00-BC-14-55-35


- Make sure that the workstation that you use to set the IP address has only one connection to the EtherNet/IP network on which the adapter resides.

The BOOTP/DHCP tool can fail to work if your workstation has multiple connections to the EtherNet/IP network.

---


To set the IP address with BOOTP/DHCP tool, complete the following steps.

1. Confirm that the adapter is connected to the network.
2. Start the BOOTP-DHCP tool.

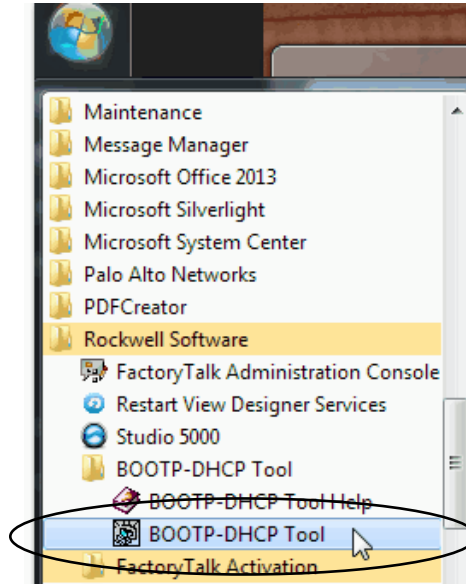

The MAC ID of the adapter appears in the Request History window.


3. Select the appropriate adapter and click Add to Relation List.

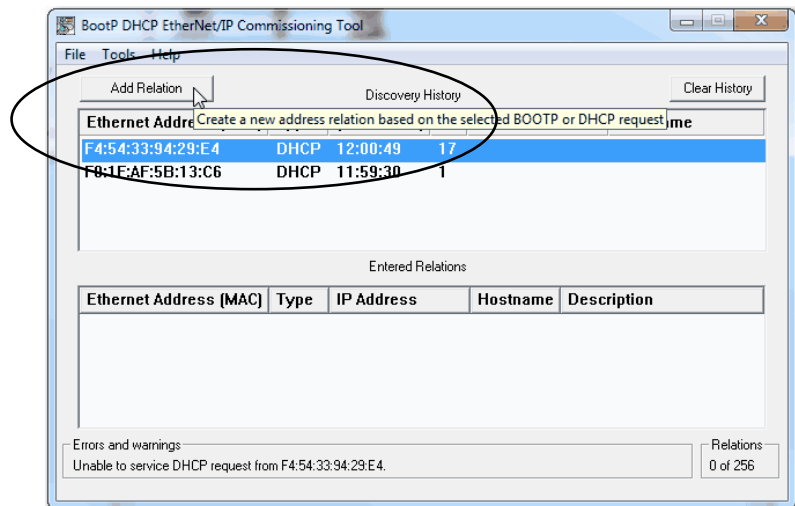

The New Entry dialog box appears.

4. Type an IP address, Hostname, and Description for the module.

Hostname and Description are optional.

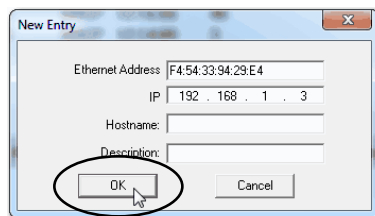

5. Click OK.


## Disable BOOTP/DHCP

After an IP address is assigned to the adapter, we recommend that you disable BOOTP/DHCP.

If you do not Disable BOOTP/DHCP, after future power cycles, the current IP configuration is cleared and the adapter sends DHCP requests again.

Click Disable BOOTP/DHCP, as shown.

After you disable BOOTP/DHCP, the adapter no longer issues DHCP requests for an IP address after future power cycles.

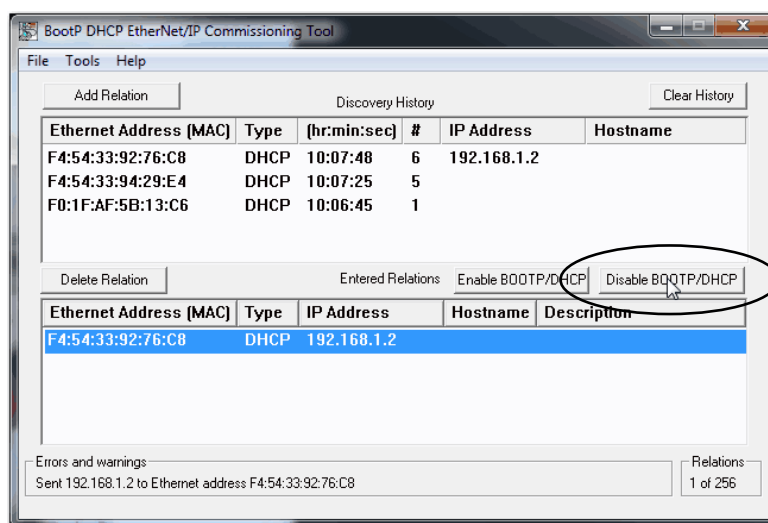

**IMPORTANT** The BOOTP-DHCP tool can fail to disable BOOTP/DHCP. If the tool fails, use RSLinx Classic software to disable BOOTP/DHCP.


For more information on how to use RSLinx Classic software to disable BOOTP/DHCP, see [page 44](#).

To disable BOOTP/DHCP in RSLinx Classic software, complete the following steps.

1. Start RSLinx Classic software.

After several seconds, an RSWho dialog box appears.


2. If no RSWho dialog box appears, from the Communications pull-down menu, choose RSWho.

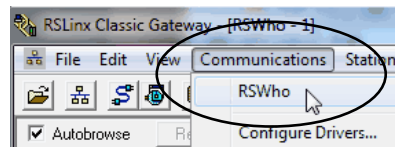

3. Navigate to the adapter.


You can access the adapter via the USB or an EtherNet/IP driver.

4. Right-click on the adapter and choose Module Configuration.

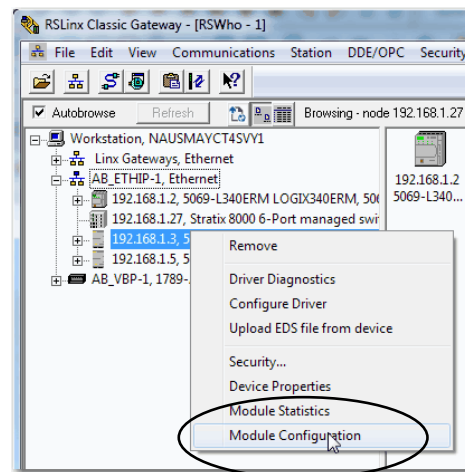



5. Click the Port Configuration tab.
6. Click Manually configure IP settings.

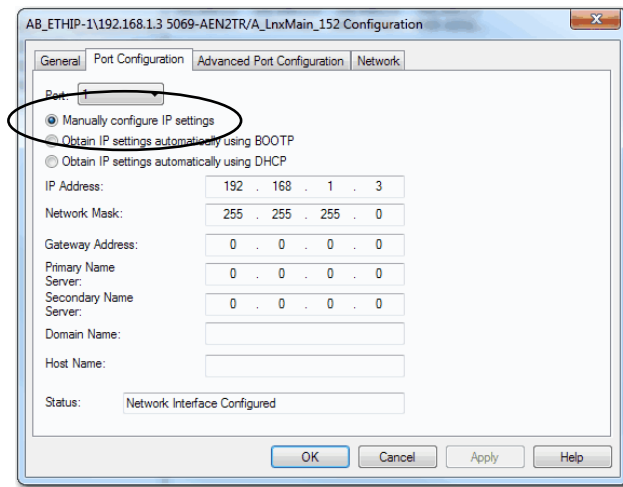

7. Click OK.

## Use the DHCP Server to Set the IP Address

Because the 5069 Compact I/O EtherNet/IP adapters are DHCP-enabled when they are in the out-of-box condition, you can use a DHCP server to set the IP address.

The DHCP server automatically assigns IP addresses to client stations logging on to a TCP/IP network. DHCP is based on BOOTP and maintains some backward compatibility.

## Use RSLinx Classic Software to Set the Adapter IP Address

To use RSLinx Classic software to set the adapter IP address for the **first time**, after it powers up in the out-of-box state, you must connect to the adapter via the USB port.

---

**IMPORTANT** Remember the following:

- You cannot use RSLinx Classic software to set the IP address on a 5069-AENTR adapter for the **first** time after it powers up in the out-of-box state; the adapter does not have a USB port.

You must use one of the tools that are described previously to set the IP address on a 5069-AENTR adapter for the first time after it powers up in the out-of-box state.

- You can use RSLinx Classic software to configure the adapter, including to change the IP address after it has been set.

In this case, you can use RSLinx Classic software with the 5069-AENTR adapter. You must access the adapter by browsing to it via an EtherNet/IP driver.

For more information on how to configure an adapter with RSLinx Classic software, see [page 51](#).

---



**WARNING:** Do not use the USB port in hazardous locations.  
5069-AEN2TR EtherNet/IP adapter only.

---



**ATTENTION:** The USB port is intended for temporary local programming purposes only and not intended for permanent connection. The USB cable is not to exceed 3.0 m (9.84 ft) and must not contain hubs.  
5069-AEN2TR EtherNet/IP adapter only.


---

Complete these steps to set the IP address on a 5069-AEN2TR adapter with RSLinx Classic software when the adapter is in the out-of-box state.


1. Confirm that your computer is connected to the adapter via a USB cable.
2. Start the RSLinx Classic software.

After several seconds, an RSWho dialog box appears.

3. If the RSWho dialog box does not appear, from the Communications pull-down menu, choose RSWho.

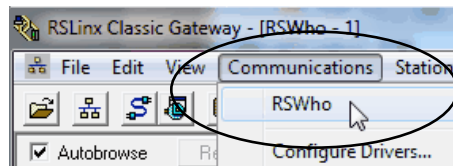


4. Right-click the adapter and choose Module Configuration.

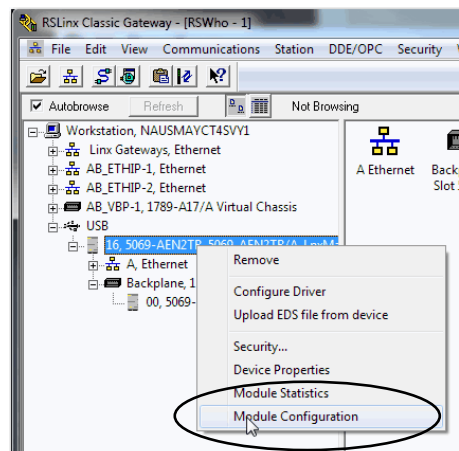

The Module Configuration dialog box appears.

5. Click the Port Configuration tab.
6. Click the Port Configuration tab.
7. Click Manually configure IP settings and set the port configuration parameters.

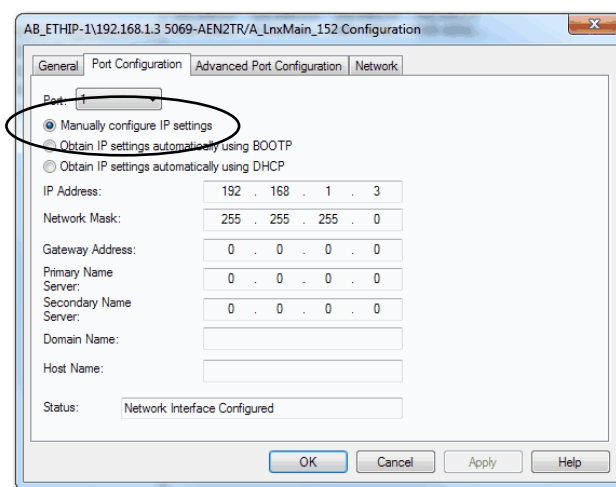

8. Click OK.

## Duplicate IP Address Detection

The adapter verifies that its IP address does not match any other device IP address on the network when you perform either of these tasks:

- Connect the adapter to a EtherNet/IP network.
- Change the IP address on the adapter.

If the IP address matches that of another device on the network, the EtherNet/IP port on the adapter transitions to conflict mode. In conflict mode, these conditions exist:

- OK status indicator blinks red.
- Network (NET) status indicator is solid red.
- The following message scrolls across the 4-character display:

---

**IMPORTANT** The 5069-AENTR adapter does not have a 4-character display.

---

<IP\_address\_of\_this\_module> Duplicate IP -  
<MAC\_address\_of\_duplicate\_node\_detected>

For example: 10.88.60.196 Duplicate IP - 00:00:BC:02:34:B4

## Duplicate IP Address Resolution

This table describes how to resolve duplicate IP addresses.

Duplicate IP Address Detection Conditions	Resolution Process
<ul style="list-style-type: none"> <li>• Both modules support duplicate IP address detection</li> <li>• Second module is added to the network after the first module is operating on the network</li> </ul>	<ol style="list-style-type: none"> <li>1. The module that began operation first uses the IP address and continues to operate without interruption.</li> <li>2. The module that begins operation second detects the duplication and enters Conflict mode.</li> </ol> <p>To assign a new IP address to the module that entered Configure mode and then leave Conflict mode, see <a href="#">Set the IP Address on the Adapter on page 38</a>.</p>
<ul style="list-style-type: none"> <li>• Both modules support duplicate IP address detection</li> <li>• Both modules were powered up at approximately the same time</li> </ul>	<p>Both EtherNet/IP devices enter Conflict mode.</p> <p>To resolve this conflict, follow these steps:</p> <ol style="list-style-type: none"> <li>a. Assign a new IP address to one of the modules by using the methods that are described in <a href="#">Set the IP Address on the Adapter on page 38</a>.</li> <li>b. Cycle power to the other device or disconnect and reconnect all Ethernet cables from the other device.</li> </ol>
One module supports duplicate IP address detection and a second module does not	<ol style="list-style-type: none"> <li>1. Regardless of which module obtained the IP address first, the module that does not support IP address detection uses the IP address and continues to operate without interruption.</li> <li>2. The module that supports duplicate IP address detection detects the duplication and enters Conflict mode.</li> </ol> <p>To assign a new IP address to the module and leave Conflict mode, see <a href="#">Set the IP Address on the Adapter on page 38</a>.</p>

## DNS Addressing

To qualify the module address further, use DNS addressing to specify a host name for a module. When you specify a host name for the module, you also specify a domain name and DNS servers. DNS addressing makes it possible to create similar network structures and IP address sequences under different domains.

DNS addressing is necessary only if you refer to the module by host name, such as in path descriptions in MSG instructions.

To use DNS addressing, follow these steps.

1. Assign a host name to the module.

A network administrator can assign a host name. Valid host names must be IEC-1131-3 compliant.

2. Configure the module parameters:

- IP address
- Subnet mask
- Gateway address
- Host name for the module
- Domain name
- primary/secondary DNS server addresses.

In the DNS server, the host name must match the IP address of the module.

---

**IMPORTANT** Make sure the DNS enable bit is set.

- If you use **Logix Designer application**, version 28 or later, to configure your module, the enable bit is set and **DNS addressing is successful**.
  - If you use **RSLink Classic software**, version 2.41.00 or later, to configure your module, the enable bit is cleared and **DNS addressing fails**.
-

3. In the Logix Designer application, add the module to the I/O configuration tree.

For more information, see Chapter 4, [Add an EtherNet/IP Communication Module to a Controller Project on page 55](#).

---

**IMPORTANT** If a child module resides in the same domain as its parent module, type the host name. If the domain name of the child module differs from its parent module, type the host name and the domain name (host.domain)

---



---

**IMPORTANT** You can also use DNS addressing in a module profile in the I/O configuration tree or in a message path. If the domain name of the destination module differs from the source module, use a fully qualified DNS name (hostname.domainname). For example, to send a message from AEN2TR1.location1.companyA to AEN2TR1.location2.company, the host names match, but the domains differ. Without the entry of a fully qualified DNS name, the module adds the default domain name to the specified host name.

---

## Configure the Adapter with RSLinx Classic Software

You can configure a 5069 Compact I/O EtherNet/IP adapter with RSLinx Classic software. Consider the following:

- 5069-AENTR adapter - You can configure the adapter with RSLinx Classic software only **after** an IP address is assigned.

The IP address must be assigned first because you can only connect to a 5069-AENTR adapter over an EtherNet/IP network. If there is not an IP address, the adapter does not appear in RSLinx Classic software when it browses the network.

- 5069-AEN2TR adapter - You can configure the adapter with RSLinx Classic software before or after an IP address is assigned.

Consider the following:

- To configure the adapter with RSLinx Classic software before you assign an IP address, you must connect to the adapter via the USB port.
- To configure the adapter with RSLinx Classic software after you assign an IP address, you can connect to the adapter via the USB port or over the EtherNet/IP network.

Complete the following steps.

1. Click the Advanced Port Configuration tab.


- IMPORTANT**
- Consider the following when you configure the port settings:
- When the adapter uses the 1 Gbps network communication rate, it supports only full-duplex mode.
  - When the adapter uses the 10 Mbps or 100 Mbps network communication rate, it supports full-duplex and half-duplex mode.
  - The speed and duplex settings for the devices on the same Ethernet network must be the same to avoid transmission errors.
  - Fixed speed and full-duplex settings offer better reliability than autonegotiate settings and are recommended for some applications.
  - If the module is connected to an unmanaged switch, leave Auto-negotiate checked or the module fails.
  - If you force the port speed and duplex with a managed switch, the corresponding port of the managed switch must be forced to the same settings or the module fails.
  - If you connect a manually configured device to an autonegotiate device (duplex mismatch), a high rate of transmission errors can occur.
  - To disable a port, clear the Enable checkbox.

You cannot disable both ports on a 5069-AENTR adapter at the same time in RSLinx Classic software. We recommend that before you disable a port, you confirm that the port is not in use.

- If you disable a port in RSLinx Classic software and the port is being used for network communication, the communication is interrupted.

In this case, if the other Ethernet port is enabled, we recommend that you moved the Ethernet cable from the disabled port and connect it to the enabled port.


After you re-enable the port that was mistakenly disabled, you can change the cable connection back to the first port

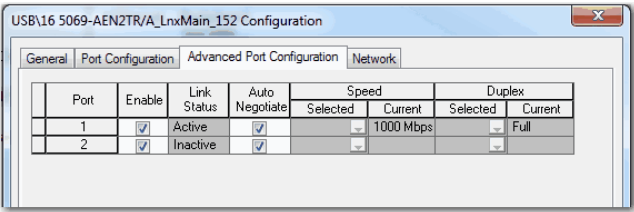




Task	Action
Let the module automatically set the port speed and duplex settings.	Leave the Auto-negotiate enabled.
Manually configure the port speed and duplex settings.	Follow these steps. <ol style="list-style-type: none"> <li>1. Clear the Auto-negotiate port speed and duplex checkbox.</li> <li>2. From the Current Port Speed pull-down menu, choose a port speed.</li> <li>3. From the Current Duplex pull-down menu, choose full-duplex.</li> </ol>

2. On the Module Configuration dialog box, click OK.
3. On the ControlLogix® Gateway Tool dialog box that appears, click Yes.

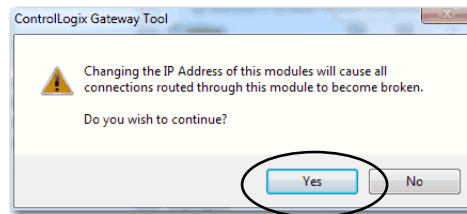

4. In RSLinx Classic software, click RSWho.
5. Open the USB branch on the menu tree.

The adapter shows the IP address.

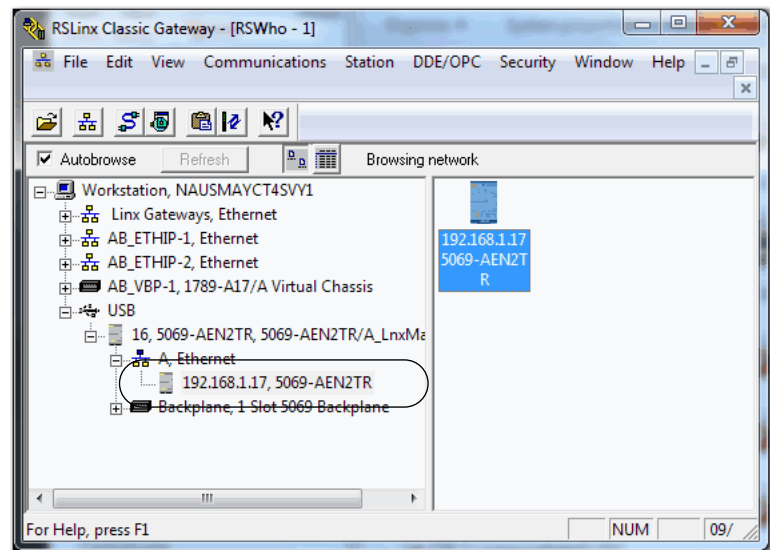

## **Notes:**

## Add an EtherNet/IP Communication Module to a Controller Project

Topic	Page
Add the Module to a Project	55
Time Synchronization	67

After you install the communication module and set the IP address, you must add the module to a controller project. The project must be online to set the Speed and Duplex configurable parameters on the module.


**IMPORTANT** You must use the following Logix Designer application, versions:

- 5069-AENTR - Version 30 or later
- 5069-AEN2TR - Version 28 or later

Version 28 or greater is slightly different from previous programming software versions. For example, in some cases, instead of tabs across the top of the Module Properties dialog box, the application uses categories on the left side of the dialog box.

### Add the Module to a Project

1. Verify that your project is offline.
2. Right-click your network port, and choose New Module.

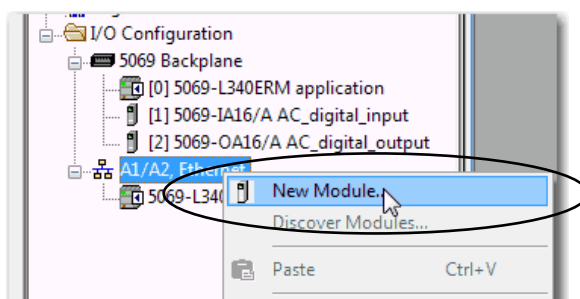


3. On the Select Module Type dialog box, complete the following tasks:
  - a. In the search field, type the catalog number for your adapter.

This example uses the 5069-AEN2TR adapter.


- b. In the Catalog Number field, select the adapter.

For some modules, the Select Major Revision dialog box can appear. If the dialog box appears, choose the major revision of the module and click OK.


- c. Click Create.

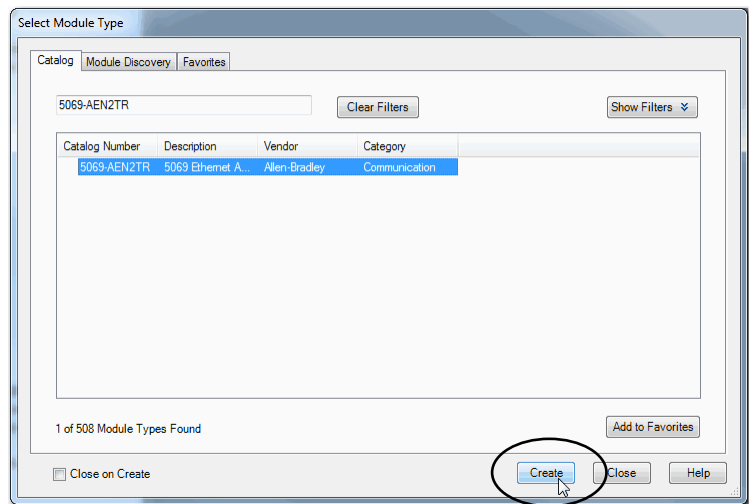

4. On the New Module dialog box, complete the following tasks on the General category page:
  - a. Type a name.
  - b. Enter the IP address.
  - c. In the Module Definition area, click Change.

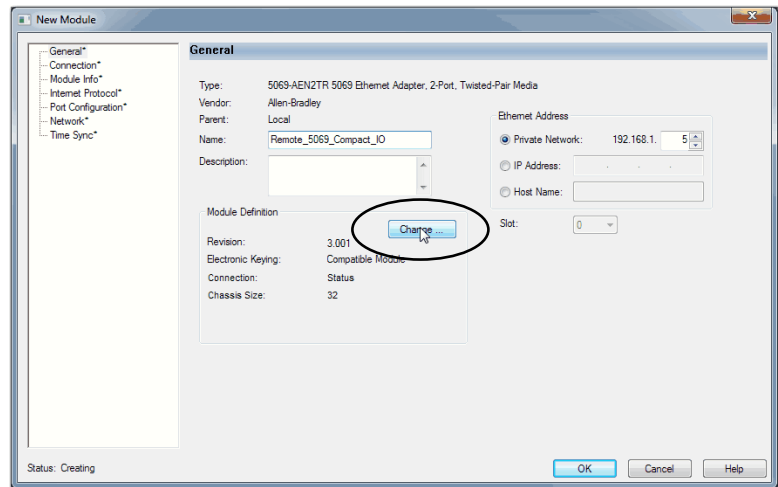

The Module Definition dialog box appears.

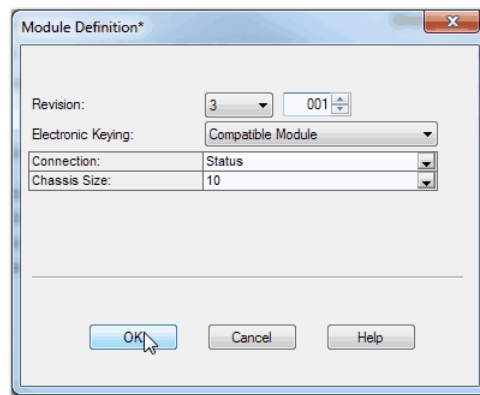

## 5. Complete the following tasks.

- a. Set the appropriate Revision of the firmware that is on your adapter.

Major Revision (left pull-down menu)	This field only displays the major revisions that are applicable to the selected series. This field appears dimmed when online unless the module supports allowing major revision changes to be made while online.
Minor Revision (right field)	Sets the minor revision of the module. The valid range is 1...255. This field is enabled while offline, and while in the Program, Remote Program, and Remote Run modes. It appears dimmed when in Run mode, or when electronic keying is set to Disable Keying

- b. Select the appropriate the Electronic Keying setting.

Electronic Keying is enabled while offline, and while in Program, Remote Program, and Remote Run modes. It appears dimmed when in Run mode.

Electronic Keying reduces the possibility that you use the wrong device in a control system. It compares the device that is defined in your project to the installed device. If keying fails, a fault occurs. These attributes are compared.

Attribute	Description
Vendor	The device manufacturer.
Device Type	The general type of the product, for example, digital I/O module.
Product Code	The specific type of the product. The Product Code maps to a catalog number.
Major Revision	A number that represents the functional capabilities of a device.
Minor Revision	A number that represents behavior changes in the device.

The following Electronic Keying options are available.

Keying Option	Description
Compatible Module	Lets the installed device accept the key of the device that is defined in the project when the installed device can emulate the defined device. With Compatible Module, you can typically replace a device with another device that has the following characteristics: <ul style="list-style-type: none"> <li>• Same catalog number</li> <li>• Same or higher Major Revision</li> <li>• Minor Revision as follows: <ul style="list-style-type: none"> <li>– If the Major Revision is the same, the Minor Revision must be the same or higher.</li> <li>– If the Major Revision is higher, the Minor Revision can be any number.</li> </ul> </li> </ul>
Disable Keying	Indicates that the keying attributes are not considered when attempting to communicate with a device. With Disable Keying, communication can occur with a device other than the type specified in the project. <p><b>ATTENTION:</b> Be cautious when you use Disable Keying; if used incorrectly, this option can lead to personal injury or death, property damage, or economic loss. We <b>strongly recommend</b> that you <b>do not use</b> Disable Keying.</p> <p>If you use Disable Keying, you must take full responsibility for understanding whether the device being used can fulfill the functional requirements of the application.</p>
Exact Match	Indicates that all keying attributes must match to establish communication. If any attribute does not match precisely, communication with the device does not occur.

Carefully consider the implications of each keying option when selecting one.

---

**IMPORTANT** When you change Electronic Keying parameters online, it interrupts connections to the device and any devices that are connected through the device. Connections from other controllers can also be broken.

If an I/O connection to a device is interrupted, the result can be a loss of data.

---

For more detailed information on Electronic Keying, see Electronic Keying in Logix5000 Control Systems Application Technique, publication [LOGIX-AT001](#).


c. Select the Connection.

None	No direct connection from Controller (Originator) to the adapter.
Status	Reports device status.


d. Set the Chassis Size to the number of modules including the adapter.

For example, one adapter with nine I/O modules equals a chassis size of ten.

e. Click OK.

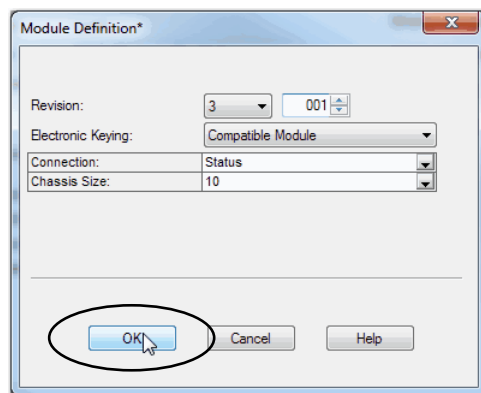


If you set the Connection to Status, click Yes on the RSLogix 5000® dialog box.

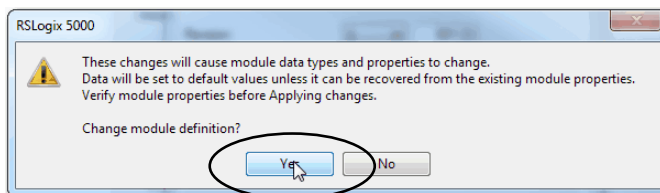


6. On the New Module dialog box, click the Connection category and complete the tasks:
  - a. Set the Requested Packet Interval (RPI). The range is 25...750 ms, with 100 ms as the default. This connection is for status data only, with no I/O.
  - b. Select the Connection over EtherNet/IP, Unicast, or Multicast.

For non-redundant controllers, the default value is Unicast when the target device supports unicast; otherwise, the default value is Multicast. For redundant controllers, the default value is Multicast when the target device supports multicast; otherwise, the default value is Unicast.

- c. Click OK.

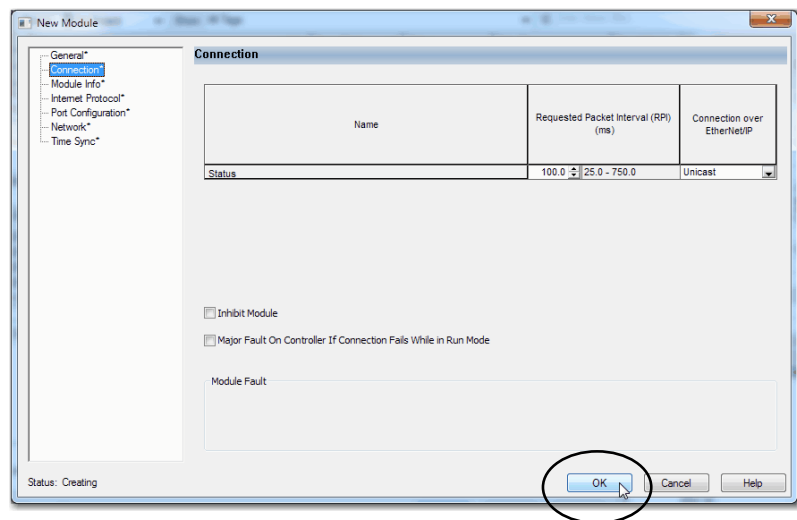


7. Save the project.
8. If the project does not have a communication path to the controller, click Browse to create a path.

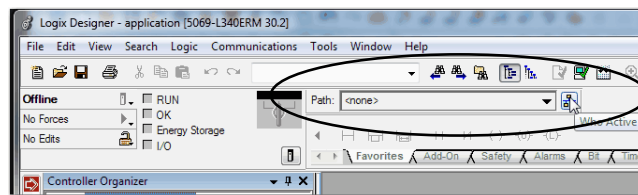





9. On the Who Active dialog box, choose the desired path and click Set Project Path and close the dialog box.

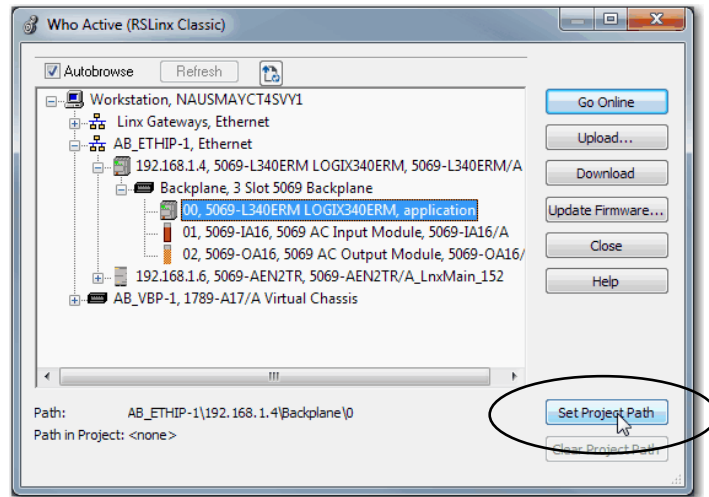


10. Verify that the controller mode switch is in the PROG mode position
11. Click the Controller Status icon, and choose Go Online.

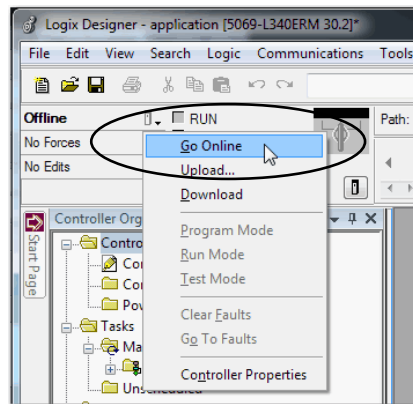


12. On the Connected To Go Online dialog box, click Download.

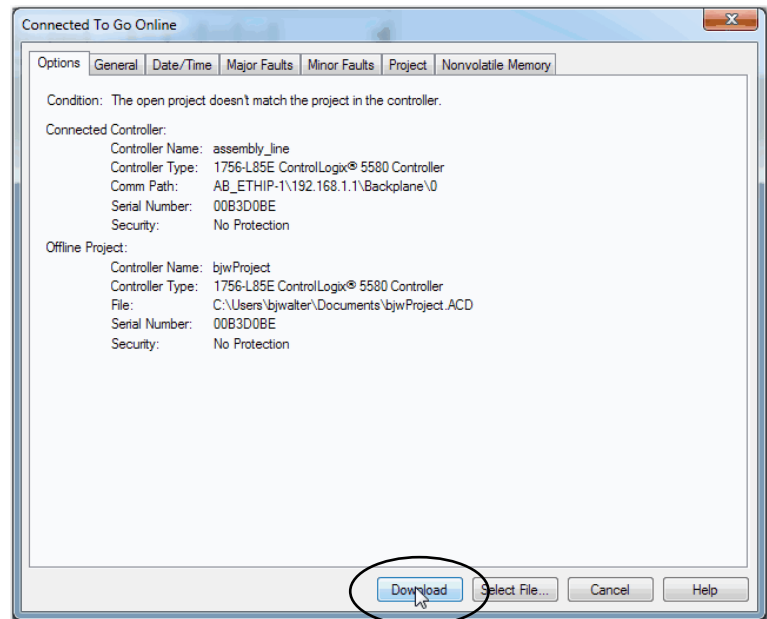


13. On the Download dialog box, click Download.

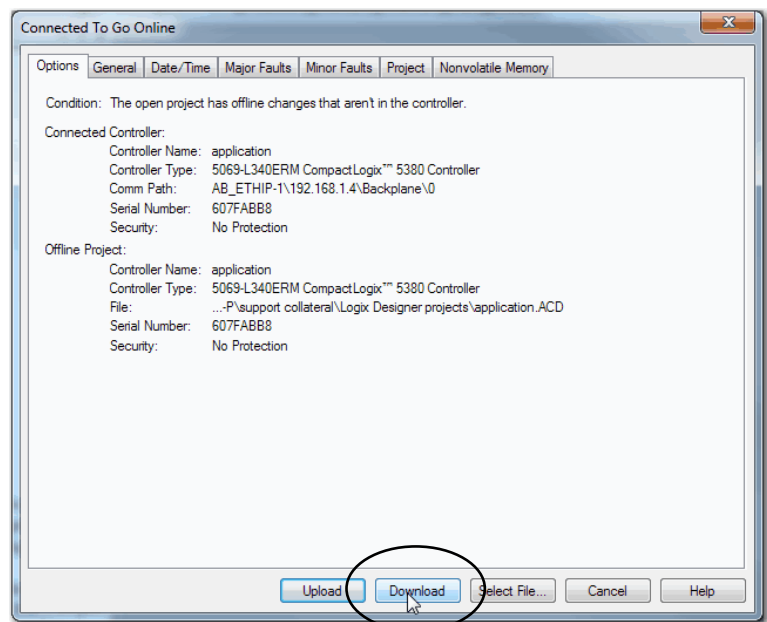


14. Confirm that you want to download the project.

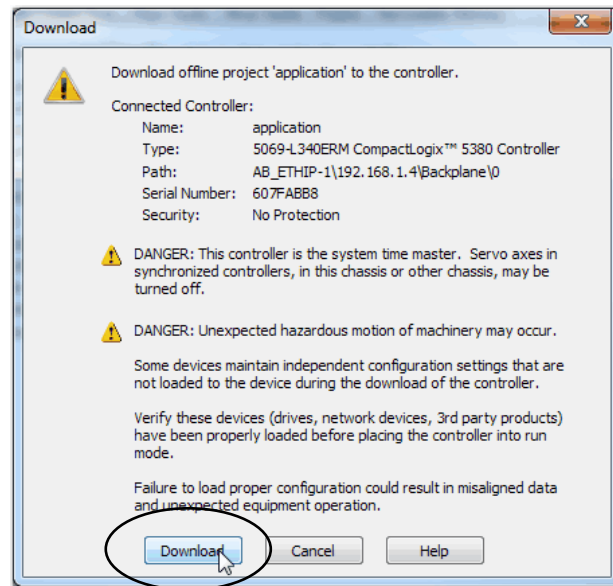


The project downloads to the controller. The dialog box closes when the download is complete.

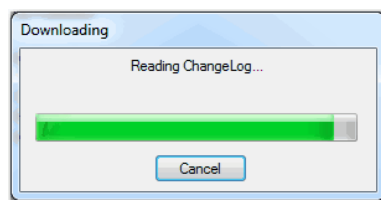


15. If you did not already configure the Ethernet port speed and duplex settings with RSLinx® Classic software, complete these tasks:
  - a. Put the controller mode switch in the REM position.
  - b. Change the Logix Designer application project to Run mode.

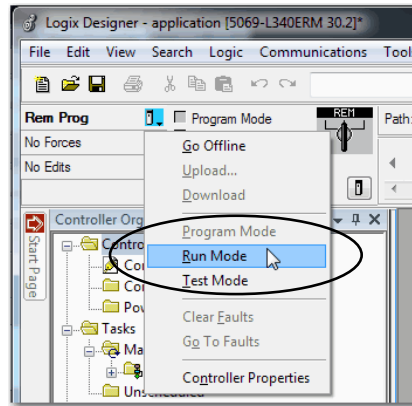

- c. When prompted to Change controller mode to Remote Run, click Yes.

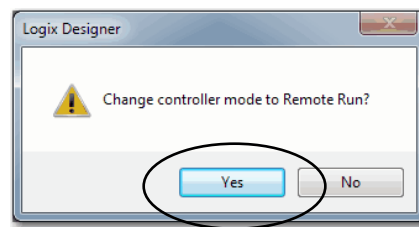

- d. Right-click the adapter, and choose Properties.

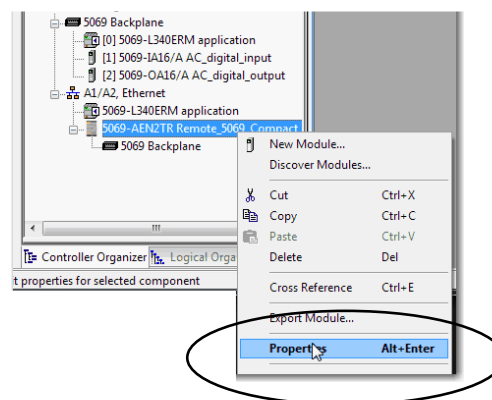


- e. On the Module Properties dialog box, click the Port Configuration category.

Desired Task	Action
Let the module automatically set the port speed and duplex settings.	Leave Auto-negotiate enabled.
Manually configure your port speed and duplex settings.	Follow these steps. 1. Clear the Auto-negotiate port speed and duplex checkbox. 2. From the Current Port Speed pull-down menu, choose a port speed. 3. From the Current Duplex pull-down menu, choose full-duplex.

**IMPORTANT** Consider the following when you configure the port settings:


- The 5069 Compact I/O™ EtherNet/IP adapters only support full-duplex mode.
- The speed and duplex settings for the devices on the same Ethernet network must be the same to avoid transmission errors.
- Fixed speed and full-duplex settings are offer better reliability than autonegotiate settings and are recommended for some applications.
- If the module is connected to an unmanaged switch, leave Auto-negotiate checked or the module fails.
- If you force the port speed and duplex with a managed switch, the corresponding port of the managed switch must be forced to the same settings or the module fails.
- If you connect a manually configured device to an autonegotiate device (duplex mismatch), a high rate of transmission errors can occur.

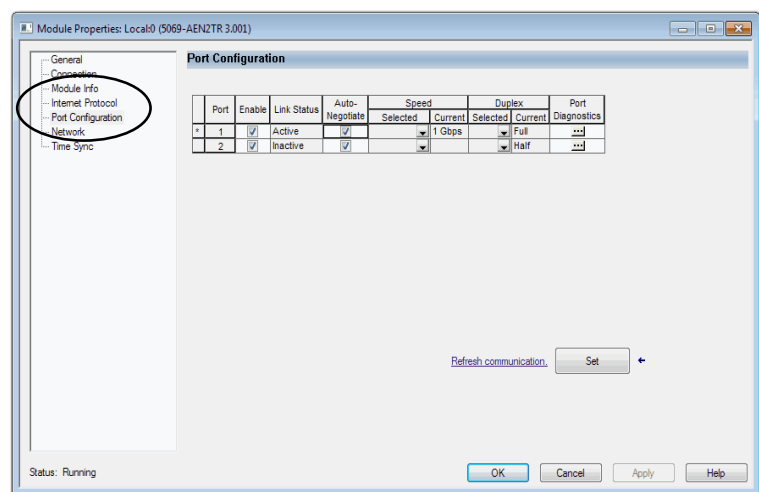

16. Click the Internet Protocol category.


If needed, you can set Internet Protocol properties such as:

- Domain Name
- Host Name
- Gateway Address
- Primary and secondary DNS Server Addresses.

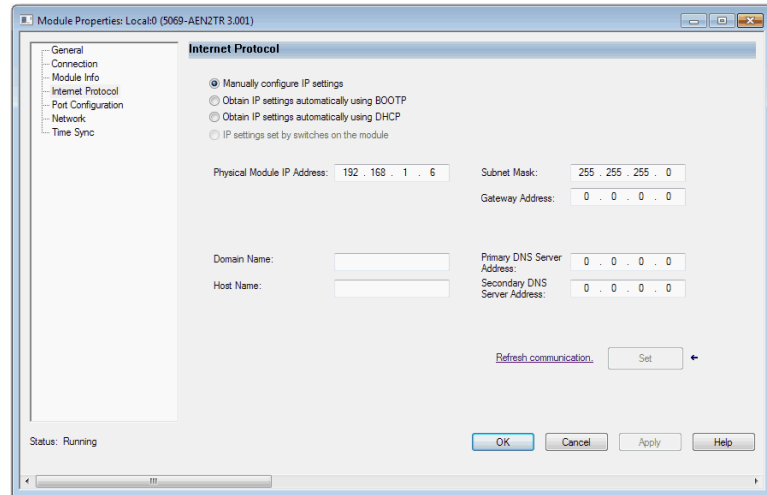

f. On the Module Properties dialog box, click OK.

**IMPORTANT** If you try to change the IP Address on this page, the following alert appears:

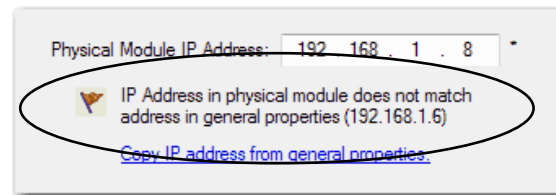

g. Save the project.

## Time Synchronization

In certain situations, the I/O modules can synchronize with the adapter before the adapter synchronizes with the system Grandmaster clock. This synchronization occurrence leads to a time difference between the I/O and the Grandmaster clock until the adapter synchronizes with the Grandmaster clock.

In your logic, verify that the adapter is synchronized with the Grandmaster clock (CIPSyncValid) before you initiate timestamp requests or scheduled outputs from your I/O modules. A system with intermediate devices, such as network bridges and switches, can require that you insert a delay until the time stabilizes in the system.

For information on how to verify that the adapter is synchronized to a Grandmaster clock, see CIP Sync Diagnostics in the Integrated Architecture and CIP Sync Configuration Application Technique, publication [IA-AT003](#). This publication also includes information on Time Sync Object Attributes.

## Notes:



## Use the Module on a Device Level Ring Network


**IMPORTANT** This chapter summarizes a DLR network.

For information on how to plan, configure, and monitor a DLR network, see the EtherNet/IP Embedded Switch Technology Application Guide, publication [ENET-AP005](#).

A Device Level Ring (DLR) network is a single-fault-tolerant ring network that is intended for the interconnection of automation devices without the need for additional switches. The ring topology offers these advantages:

- Media redundancy
- Fast network fault detection and reconfiguration
- Resiliency of a single-fault tolerant network
- Easy implementation without any additional hardware requirements

One DLR network can support as many as 50 nodes. A DLR network supports copper connections (maximum of 100 m [328 ft]), fiber-optic connections (maximum of 2 km [1.24 mi]), or a mix of copper and fiber.

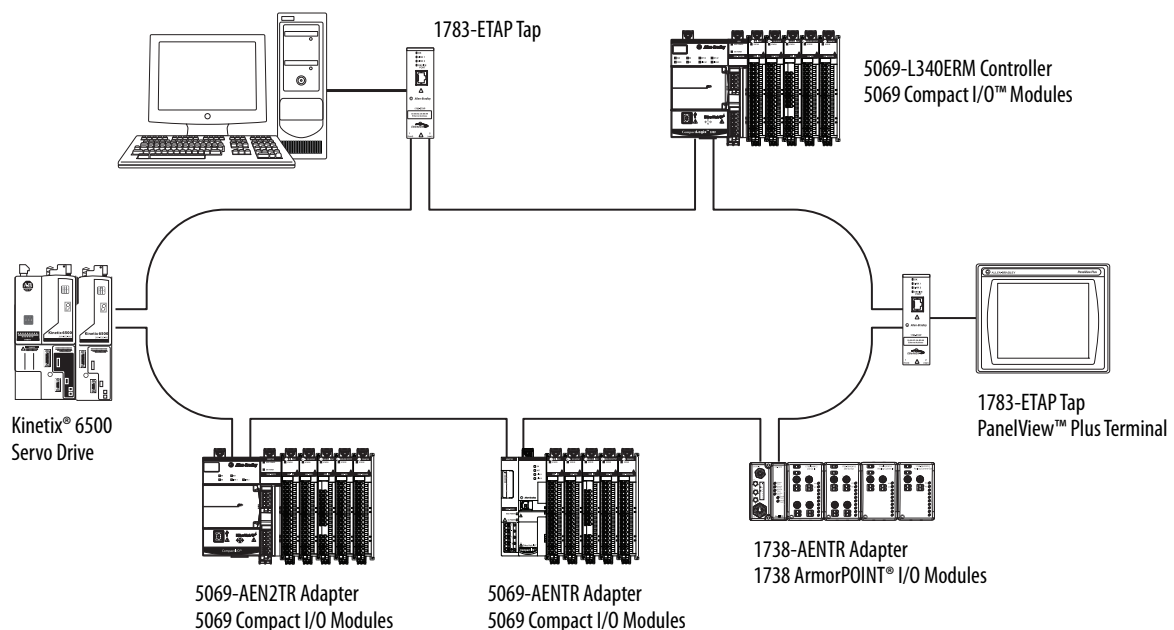

A DLR network includes the following nodes.

Node	Description
Supervisor node	<p>A DLR network requires at least one node to be configured as ring supervisor.</p> <p><b>IMPORTANT:</b> By default, the supervisor function is disabled on supervisor-capable devices, so they are ready to participate in a linear/star network or as a ring node on a DLR network.</p> <p>In a DLR network, you must configure at least one of the supervisor-capable devices as the ring supervisor before physically connecting the ring. If you do not, the DLR network does not work.</p> <p>The ring supervisor provides these main functions:</p> <ul style="list-style-type: none"><li>• Manages traffic on the DLR network</li><li>• Collects diagnostic information for the network</li></ul> <p>We recommend that you do the following:</p> <ul style="list-style-type: none"><li>• Configure at least one back-up supervisor.</li><li>• Configure the desired active ring supervisor with a numerically higher precedence value as compared to the back-up supervisors.</li><li>• Track the supervisor-precedence values for all supervisor-enabled nodes in the DLR network.</li></ul>
Ring node	<p>A ring node is any node that operates on the network to process data that is transmitted over the network. A ring node can also pass on the data to the next node on the network. When a fault occurs on the DLR network, the ring nodes reconfigure themselves and relearn the network topology. Additionally, ring nodes can report fault locations to the active ring supervisor.</p>

## Module Diagnostics

Topic	Page
Diagnostics with the Logix Designer Application	71
Diagnostics with RSLinx Classic Software	80
EtherNet/IP Adapter Diagnostic Web Pages	85
Reset the Adapter	92

This chapter describes how to diagnose and troubleshoot issues with the 5069 Compact I/O™ EtherNet/IP adapter.

---

**IMPORTANT** The example screens in this chapter are for a 5069-AEN2TR adapter. The screens for the 5069-AENTR adapter are the same.

---

### Diagnostics with the Logix Designer Application


You can use the Module Properties in the Logix Designer application to diagnose issues with the adapter.

When your project is online, these categories display information about the state and status of the adapter:

- [Connection Category](#)
- [Module Info Category](#)
- [Port Configuration Category](#)
- [Time Sync Category](#)

## Connection Category

The Connection category displays information about the condition of the connection between the controller and the module. The data on this tab comes directly from the controller.

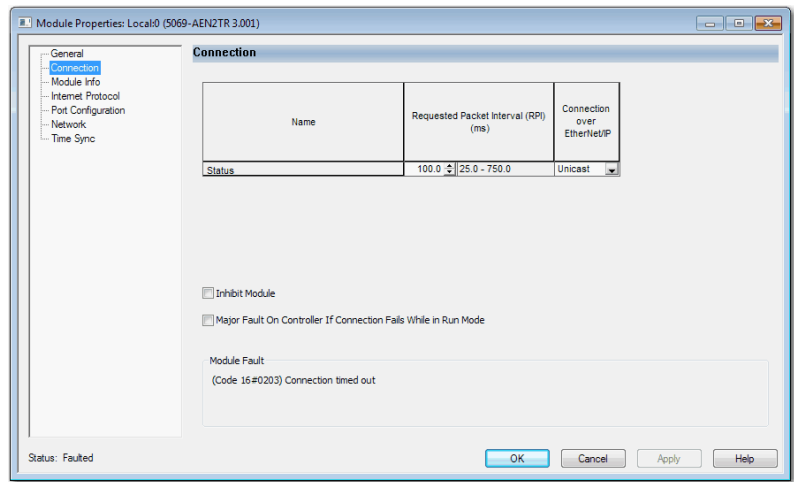

### Module Fault

Module Fault displays the fault code that is returned from the controller, and text on the Module Fault that occurred. In the Logix Designer online help, type the fault code into the Search field to find information on the fault code.

The following are common categories for errors.

Connection Request Error	The controller is attempting to make a connection to the module and has received an error. The connection was not made.
Service Request Error	The controller is attempting to request a service from the module and has received an error. The service was not performed successfully.
Module Configuration Invalid	The configuration in the module is invalid.
Electronic Keying Mismatch	Electronic Keying is enabled and some part of the keying information differs between the software and the module.

*Status*

The Status line at the bottom of the Module Properties dialog box displays the status that the controller has about the module.

Status	Meaning
Standby	A transient state that occurs when shutting down.
Faulted	The controller is unable to communicate with the module. When the status is Faulted, the Connection tab displays the fault.
Validating	A transient state that occurs before connecting to the module.
Connecting	A state that occurs while connections are being established to the module.
Running	The module is communicating and everything is working as expected.
Shutting Down	The connections are closing.
Inhibited	The connection to the module is inhibited.
Waiting	The connection to this module is not made due to one of the following: <ul style="list-style-type: none"> <li>• The parent has not yet made a connection to it.</li> <li>• The parent is inhibited.</li> <li>• The parent is faulted.</li> </ul>
Offline	You are not online.
Reconfiguring	The configuration information is being downloaded to the module again.
Firmware Updating	The modules firmware is being updated.
Configuring	Indicates that the Logix controller is configuring the module.

### Module Info Category

Module Info displays the module identity and status information about the module. See [Table 3](#) for parameter descriptions. You can also reset the module to its power-up state if needed. See [Reset Module on page 75](#).



**ATTENTION:** When you reset a module, all connections to or through the module are closed, and can result in loss of control.

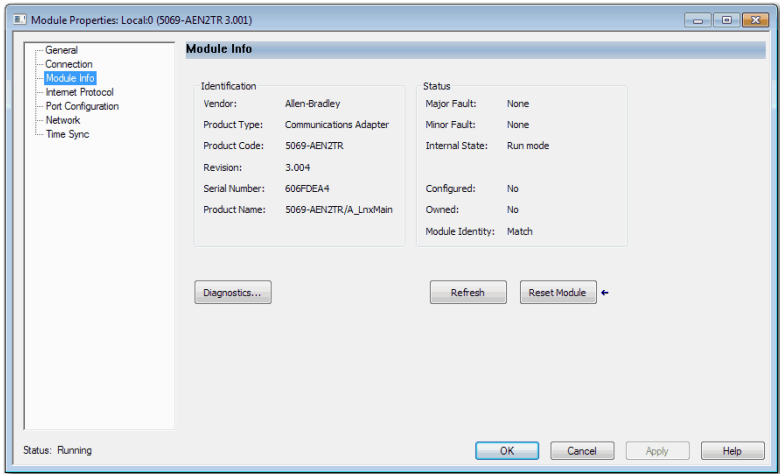


Table 3 - Module Info Parameters

Parameter	Description
Identification	Displays the following: <ul style="list-style-type: none"><li>• Vendor</li><li>• Product Type</li><li>• Product Code</li><li>• Revision</li><li>• Serial Number</li><li>• Product Name</li></ul> The name that is displayed in the Product Name field is read from the module. This name displays the series of the module.
Major/Minor Fault	Displays one of the following fault types: <ul style="list-style-type: none"><li>• None</li><li>• Unrecoverable</li><li>• Recoverable</li></ul>

**Table 3 - Module Info Parameters**

Parameter	Description
Internal State	<p>Displays the current operational state of the module:</p> <ul style="list-style-type: none"> <li>• Self-test</li> <li>• Flash update</li> <li>• Communication fault</li> <li>• Unconnected</li> <li>• Flash configuration bad</li> <li>• Major Fault (refer to Major/Minor Fault)</li> <li>• Run mode</li> <li>• Program mode</li> <li>• (16#xxxx) unknown</li> </ul> <p>If you selected the wrong module from the module selection tab, this field displays a hexadecimal value. A textual description of this state is only given when the module identity you provide is a match with the actual module.</p>
Configured/Owned	For I/O modules only. Does not apply to adapters, scanners, bridges, or other communication modules
Module Identity	<p>Match</p> <ul style="list-style-type: none"> <li>• Agrees with what is specified on the General Tab.</li> <li>• For the Match condition to exist, the following must agree: <ul style="list-style-type: none"> <li>– Vendor</li> <li>– Module Type (the combination of Product Type and Product Code for a particular Vendor)</li> <li>– Major Revision</li> </ul> </li> </ul> <p>Mismatch</p> <ul style="list-style-type: none"> <li>• Does not agree with what is specified on the General Tab.</li> </ul> <p>The Module Identity field does not consider the Electronic Keying or Minor Revision selections for the module that were specified on the General Tab.</p>

### *Refresh*

Click this button to refresh the tab with new data from the module.

### *Reset Module*

To reset a module to its power-up state, click Reset Module.

---

**IMPORTANT** You cannot reset the 5069-AENTR adapter when it is in Protected Mode. For more information on Protected Mode, see [page 22](#).

---




**ATTENTION:** When you reset a module, all connections to or through the module are closed, and can result in loss of control.

---


### Port Configuration Category

If communication with the adapter fails, click Refresh communication to try to restart communication with the module.

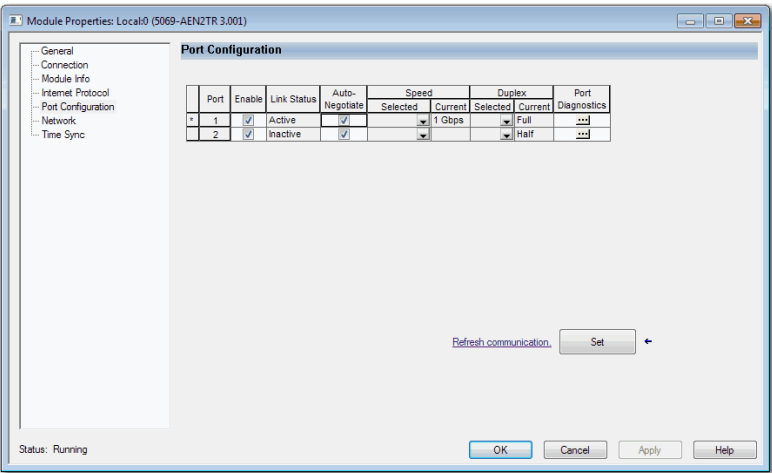

### Port Diagnostics

On the Port Configuration category, click the Port Diagnostics button to view information for the port. See [Table 4 on page 77](#) for parameter descriptions.

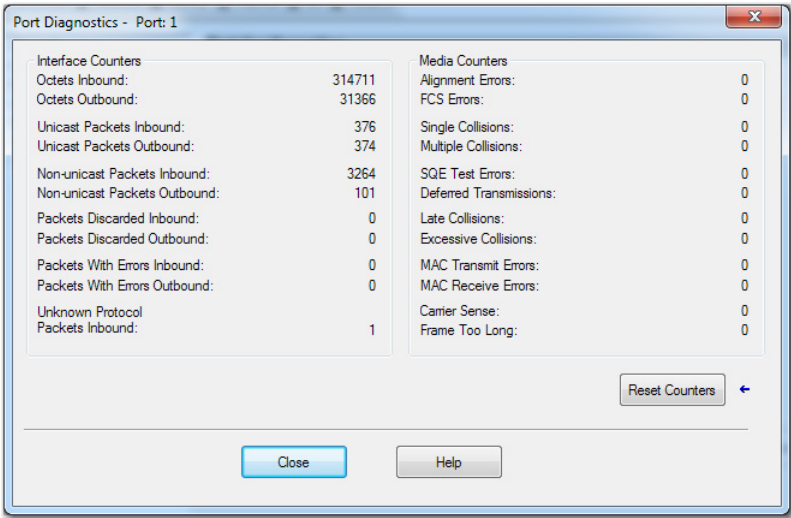



**Table 4 - Port Diagnostics Parameters - Logix Designer**

Parameter	Description
<b>Interface Counters</b>	The interface Counters values have no value when you are offline or online and there is a communication error.
Octets Inbound	Displays the number of octets that are received on the interface.
Octets Outbound	Displays the number of octets that are transmitted to the interface.
Unicast Packets Inbound	Displays the number of unicast packets that are received on the interface.
Unicast Packets Outbound	Displays the number of unicast packets that are transmitted on the interface.
Non-unicast Packets Inbound	Displays the number of non-unicast packets that are received on the interface.
Non-unicast Packets Outbound	Displays the number of non-unicast packets that are transmitted on the interface.
Packets Discarded Inbound	Displays the number of inbound packets that are received on the interface but discarded.
Packets Discarded Outbound	Displays the number of outbound packets that are transmitted on the interface but discarded.
Packets With Errors Inbound	Displays the number of inbound packets that contain errors (excludes discarded inbound packets).
Packets With Errors Outbound	Displays the number of outbound packets that contain errors (excludes discarded outbound packets).
Unknown Protocol Packets Inbound	Displays the number of inbound packets with unknown protocol.
Media Counters	The Media Counters values have no value when you are offline or online and there is a communication error.
Alignment Errors	Displays the number of frames received that are not an integral number of octets in length.
FCS Errors	Displays the number of frames received that do not pass the FCS check.
Single Collisions	Displays the number of successfully transmitted frames that experienced exactly one collision.
Multiple Collisions	Displays the number of successfully transmitted frames that experienced multiple collisions.
SQE Test Errors	Displays the number of times an SQE test error message was generated.
Deferred Transmissions	Displays the number of frames for which the first transmission attempt is delayed because the medium is busy.
Late Collisions	Displays the number of times a collision is detected later than 512 bit-times into the transmission of a packet.
Excessive Collisions	Displays the number of frames for which transmission fails due to excessive collisions.
MAC Transmit Errors	Displays the number of frames for which transmission fails due to an internal MAC sub layer transmit error.
MAC Receive Errors	Displays the number of frames for which reception on an interface fails due to an internal MAC sub layer receive error.
Carrier Sense	Displays the number of times that the carrier sense condition was lost or never asserted when attempting to transmit a frame.
Frame Too Long	Displays the number of frames received that exceed the maximum permitted frame size.
Reset Counters	Click Reset Counter to reset the interface and media counter values to zero. The values then update to the current counter values. Reset Counter appears dimmed in the following conditions: <ul style="list-style-type: none"> <li>The project is offline.</li> <li>The project is online and a communication error occurred.</li> </ul>

## Time Sync Category

The Time Sync displays information that is related to CIP Sync time synchronization. The information appears only if the project is online and CIP Sync is enabled.

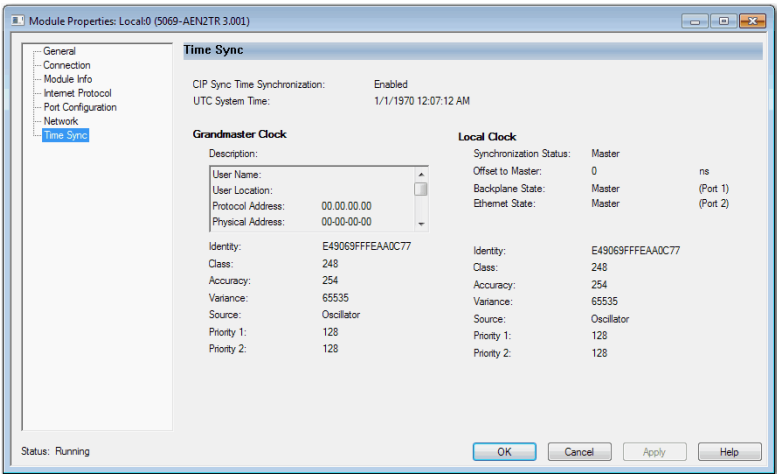


Table 5 - Time Sync Parameters

Grandmaster Clock	
Description	<p>Displays information about the Grandmaster clock. The vendor of the Grandmaster device controls this information. The following information is specified:</p> <ul style="list-style-type: none"><li>• User Name</li><li>• User Location</li><li>• Protocol Address</li><li>• Physical Address</li><li>• Clock Type</li><li>• Manufacturer Name</li><li>• Model</li><li>• Serial Number</li><li>• Hardware Revision</li><li>• Firmware Revision</li><li>• Software Version</li><li>• Profile Identity</li><li>• Physical Protocol</li><li>• Network Protocol</li><li>• Port Number</li></ul> <p>Use the vertical scroll bar to view the data.</p>
Identity	Displays the unique identifier for the Grandmaster clock. The format depends on the network protocol. Ethernet network encodes the MAC ID into the identifier.
Class	Displays a measure of the quality of the Grandmaster clock. Values are defined from 0...255 with zero as the best clock.
Accuracy	Indicates the expected absolute accuracy of the Grandmaster clock relative to the PTP epoch. The accuracy is specified as a graduated scale that starts at 25 nsec and ends at greater than 10 seconds or unknown. The lower the accuracy value, the better the clock.
Variance	Displays the measure of inherent stability properties of the Grandmaster clock. The value is represented in offset scaled log units. The lower the variance, the better the clock.

**Table 5 - Time Sync Parameters**

Source	Displays the time source of the Grandmaster clock. The available values are: <ul style="list-style-type: none"> <li>• Atomic Clock</li> <li>• GPS</li> <li>• Radio</li> <li>• PTP</li> <li>• NTP</li> <li>• HAND set</li> <li>• Other</li> <li>• Oscillator</li> </ul>
Priority 1 / Priority 2	Displays the relative priority of the Grandmaster clock to other clocks in the system. The priority values range from 0 . . . 255. The highest priority is zero. The default value for both settings is 128.
<b>Local Clock</b>	
Synchronization Status	Displays whether the local clock is synchronized or not synchronized with the Grandmaster reference clock. A clock is synchronized if it has one port in the slave state and is receiving updates from the time master.
Offset to Master	Displays the amount of deviation between the local clock and the Grandmaster clock in nanoseconds.
Backplane State	Displays the current state of the backplane. The available values are: Initializing, Faulty, Disabled, Listening, PreMaster, Master, Passive, Uncalibration, Slave, or None.
Ethernet State	Displays the state of the Ethernet port. The available values are: Initializing, Faulty, Disabled, Listening, PreMaster, Master, Passive, Uncalibration, Slave, or None.
Identity	Displays the unique identifier for the local clock. The format depends on the network protocol. Ethernet network encodes the MAC ID into the identifier.
Class	Displays a measure of quality of the local clock. Values are defined from 0 . . . 255, with zero as the best clock.
Accuracy	Indicates the expected absolute accuracy of the local clock relative to the PTP epoch. The accuracy is specified as a graduated scale that starts at 25 nsec and ends at greater than 10 seconds or unknown. The lower the accuracy value, the better the clock.
Variance	Displays the measure of inherent stability properties of the local clock. The value is represented in offset scaled log units. The lower the variance, the better the clock.
Source	Displays the time source of the local clock. The available values are: <ul style="list-style-type: none"> <li>• Atomic Clock</li> <li>• GPS</li> <li>• Terrestrial Radio</li> <li>• PTP</li> <li>• NTP</li> <li>• HAND set</li> <li>• Other</li> <li>• Oscillator</li> </ul>

## Diagnostics with RSLinx Classic Software


You can also view diagnostic information in RSLinx® Classic software. Diagnostic information is available on the following tabs:

- [General Tab](#)
- [Port Diagnostics Tab](#)
- [Connection Manager Tab](#)
- [USB Tab](#)

1. From the Communications menu, click RSWho.


The RSWho dialog box appears.

2. Navigate to the Ethernet network.
3. Right-click the EtherNet/IP module and click Module Statistics.

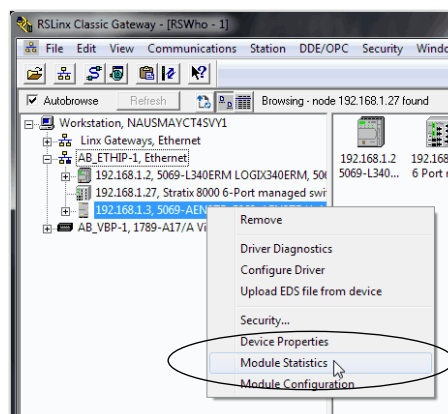


### General Tab

The General tab shows device information and any faults on the adapter.

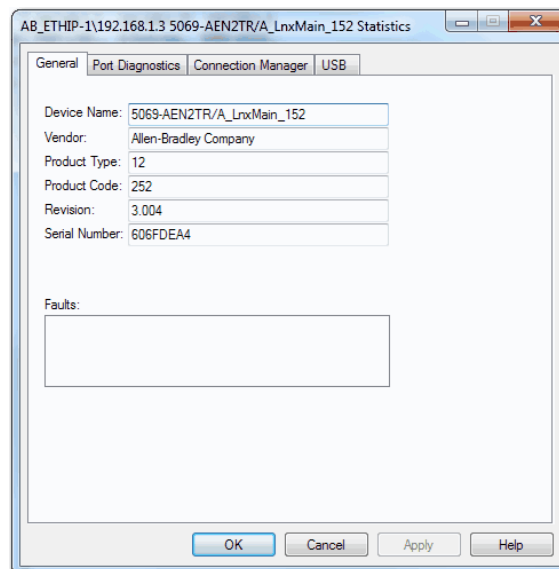

## Port Diagnostics Tab

The Port Diagnostics tab shows information for the port. See [Table 6 on page 81](#) for parameter descriptions.

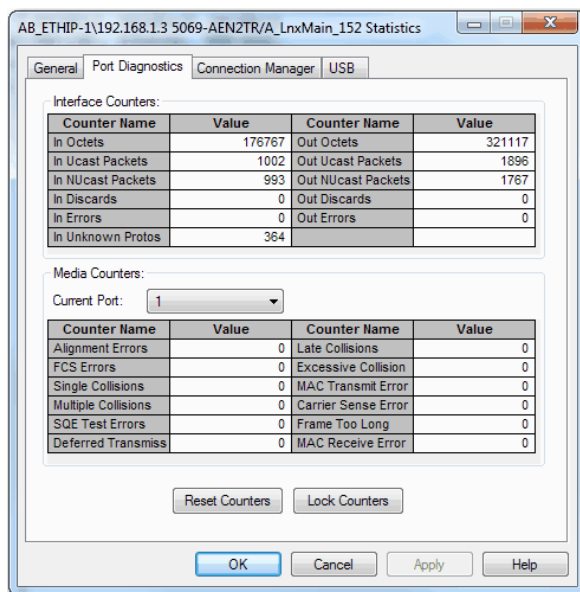

**Table 6 - Port Diagnostics Parameters - RSLogix Classic**


Parameter	Description
<b>Interface Counters</b>	Provides information relevant to receipt of packets on the interface
In Octets	Octets received on the interface.
Out Octets	Octets sent out from the interface.
In Ucast Packets	Unicast packets that are received on the interface.
Out Ucast Packets	Unicast packet sent out from the interface.
In NUcast Packets	Non-unicast packets that are received on the interface.
Out NUcast Packets	Non-unicast packets sent out from the interface.
In Discards	Inbound packets that were received on the interface but discarded.
Out Discards	Outbound packets that were sent out from the interface but were discarded.
In Errors	Inbound packets that contain errors (excludes In Discards).
Out Errors	Outbound packets that contain errors.
In Unknown Protos	Inbound packets with unknown protocol.

**Table 6 - Port Diagnostics Parameters - RSLinx Classic**

Parameter	Description
<b>Media Counters</b>	Provides information specific to Ethernet media you are using
Alignment Errors	Frames received that are not an integral number of octets in length.
FCS Errors	Frames received that do not pass the FCS (Frame Check Sequence) check.
Single Collisions	Successfully transmitted frames that experienced exactly one collision.
Multiple Collisions	Successfully transmitted frames that experienced multiple collisions.
SQE Test Errors	Number of times an SQE test error message was generated.
Deferred Transmissions	Frames for which the first transmission attempt is delayed because the medium is busy.
Late Collisions	Number of times a collision is detected later than 512 bit-times into the transmission of a packet.
Excessive Collisions	Frames for which transmission fails due to excessive collisions.
MAC Transmit Errors	Frames for which transmission fails due to an internal MAC sub layer transmit error.
MAC Receive Errors	Frames for which reception on an interface fails due to an internal MAC sub layer receive error.
Carrier Sense	Times that the carrier sense condition was lost or never asserted when attempting to transmit a frame.
Frame Too Long	Frames received that exceed the maximum permitted frame size.
Reset Counters	Click Reset Counter to reset the interface and media counter values to zero. The values then update to the current counter values. Reset Counter appears dimmed in the following conditions: <ul style="list-style-type: none"> <li>• The project is offline.</li> <li>• The project is online and a communication error occurred.</li> </ul>

## Connection Manager Tab

See [Table 7](#) for a description of the Connection Manager properties.

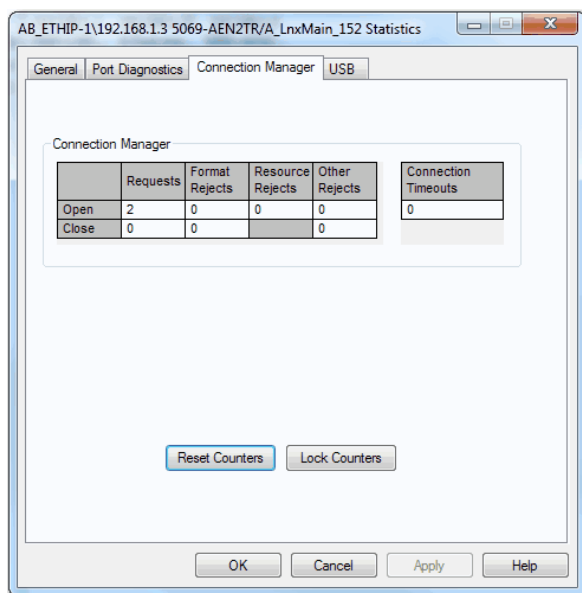

**Table 7 - Connection Manager Properties - RSLinx Classic**

Field	Description
Requests	Number of open/close connection requests that this module has received.
Format Rejects	Number of open/close connection requests that this module has rejected because the request was not formatted correctly or because some parameter value was not within a supported range of values.
Resource Rejects	Number of open connection requests that this module has rejected because the module did not have enough resources (buffers, link bandwidth, or CPU utilization) to honor the request.
Other Rejects	Number of forwarded open/close connection requests a module rejects.
Timeouts	Number of connections that are not explicitly closed by the connection originator, but closed by this module because they were not being used.

## USB Tab

**IMPORTANT**    The 5069-AENTR adapter does not have a USB tab because it does not have a USB port.

The USB tab provides the following information about the adapter USB object.

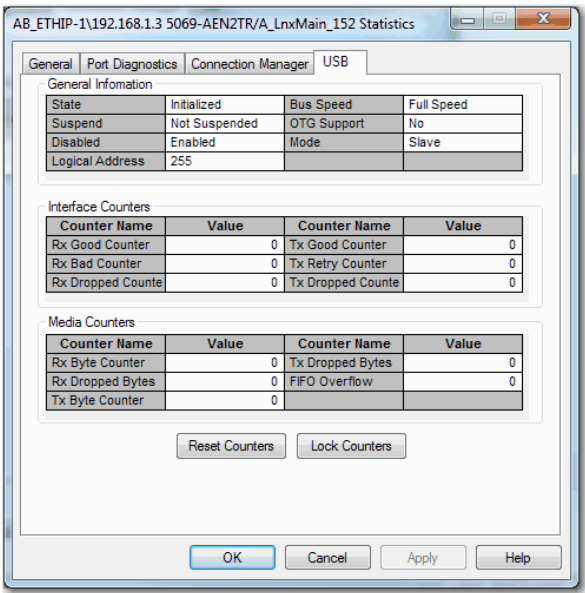


Table 8 - General Information - RSLinx Classic

Attribute Name	Description
State	State (Initializing, Fault, Initialized, Configured, Ready, and Reserved) of the USB interface.
Suspend	The USB interface was suspended by the host.
Disabled	The USB interface was disabled by the host.
Logical Address	Logical address of the USB interface (slot number in the virtual backplane).
Bus Speed	The highest USB bus speed the USB interface supports.
OTG Support	USB On The Go (OTG) capability support.
Mode	The operating mode (slave/host) of the USB interface, if the interface supports OTG.



**Table 9 - Interface Counters Provide Diagnostic Information in the USB-CIP Layer - RSLinx Classic**

Counter Name	Description
Rx Good Counter	Total number of good USB-CIP transfers received.
Rx Bad Counter	Total number of bad USB-CIP transfers received.
Rx Dropped Counter	Total number of dropped USB-CIP transfers.
Tx Good Counter	Total number of USB-CIP transfers sent.
Tx Retry Counter	Total number of USB-CIP transfers retried.
Tx Dropped Counter	Total number of USB-CIP transfers dropped.

**Table 10 - Media Counters - RSLinx Classic**

Counter Name	Description
Rx Byte Counter	Total number of bytes received.
Rx Dropped Counter	Total number of received bytes dropped.
Tx Byte Counter	Total number of bytes sent.
Tx Dropped Bytes	Total number of transmit bytes dropped.
FIFO Overflow	Total number of FIFO (First in First Out) overflows.

## EtherNet/IP Adapter Diagnostic Web Pages

The adapters provide diagnostic web pages.

---

### **IMPORTANT** Consider the following:

- The diagnostic web pages have many fields that you can use to monitor the EtherNet/IP adapter operating state. This section describes only the most common fields that are used during monitoring.

To troubleshoot problems that you diagnose, see the Troubleshoot EtherNet/IP Networks Application Technique, publication [ENET-AT003](#).

- You cannot disable the diagnostic web pages for the 5069 Compact I/O™ EtherNet/IP adapters.

The diagnostic web pages are available for the adapters whenever the adapters are operating.

---

The most commonly used diagnostic web pages for the 5069 Compact I/O EtherNet/IP adapters are the following:

- [Diagnostic Overview Page](#)
- [Network Settings](#)
- [Ethernet Statistics](#)
- [Ring Statistics](#)

---

**IMPORTANT** The 5069 Compact I/O EtherNet/IP adapters offer other diagnostic web pages. Those web pages are not as commonly used as the other pages described in this section.

---


## Access Web Browser Support

To access the diagnostic web pages, follow these steps.

1. Open your web browser.
2. In the Address field, type the IP address of the adapter and press Enter.

The Home diagnostic web page appears.

EtherNet/IP Module Internet Protocol (IP) Address

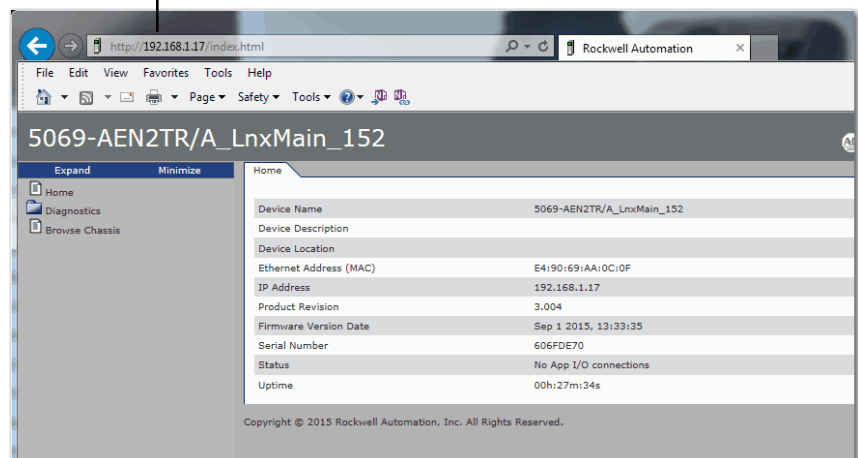

3. Open the Diagnostics folder in the left-most navigation bar, and click the link for each diagnostic web page you must monitor.

## Diagnostic Overview Page

The Diagnostic Overview web page shows the status of the adapter.

5069-AEN2TR/A\_LnxMain\_152

Allen-Bradley Rockwell Automation

Expand Minimize

Diagnostic Overview Network Settings Application Connections Bridge Connections Ethernet Statistics Ring Statistics

Home  
Diagnostics  
Diagnostic Overview  
Network Settings  
Application Connections  
Bridge Connections  
Ethernet Statistics  
Ring Statistics  
Advanced Diagnostics  
Browse Chassis

Module Resource Utilization (All Ports)	
I/O Comms Utilization (Actual)	0.0 %
I/O Comms Utilization (Theoretical)	0.0 %

CIP Connection Statistics (All Ports)	
Active Total	0
Active Messaging	0
Active I/O	0
Maximum Total Observed	1
Maximum Total Supported	320

TCP Connections (EtherNet/IP Port)	
Active	1
Maximum Observed	1
Maximum Supported	32

HMI/MSG Unconnected (EtherNet/IP Port)	
Sent Packets Per Second	0
Received Packets Per Second	0
Sent Packet Count	224
Received Packet Count	224

HMI/MSG Connected (EtherNet/IP Port)	
Sent Packets Per Second	0
Received Packets Per Second	0
Sent Bytes Per Second	0
Received Bytes Per Second	0
Sent Packet Count	518
Received Packet Count	518

I/O Packets Per Second (EtherNet/IP Port)	
Total	0
Sent	0
Received	0

I/O Packet Counts (EtherNet/IP Port)	
Total	0
Sent	0
Received	0
Rejected	0
Missed	0

Multicast Producers (EtherNet/IP Port)	
Active	0
Maximum Observed	0
Maximum Supported	32
Base Address	239.192.3.0

Seconds Between Refresh:  Disable Refresh with 0.

Copyright © 2015 Rockwell Automation, Inc. All Rights Reserved.

## Network Settings

The Network Settings diagnostic web page shows the settings for the Network Interface configuration, Ethernet Interface Configuration, and the Ethernet ports.

The screenshot displays the 'Network Settings' page for a Rockwell Automation device. The page is titled '5069-AEN2TR/A\_LnxMain\_152' and features the Allen-Bradley and Rockwell Automation logos. A left-hand navigation pane lists various diagnostic options, with 'Network Settings' currently selected. The main content area is divided into several sections:

- Network Interface:** A table showing configuration details for the primary network interface.
 

Ethernet Address (MAC)	E4:90:69:AA:0C:0F
IP Address	192.168.1.17
Subnet Mask	255.255.255.0
Default Gateway	
Primary Name Server	
Secondary Name Server	
Default Domain Name	
Host Name	
Name Resolution	DNS Enabled
SMTP Server	
- Ethernet Interface Configuration:** A table showing configuration for the Ethernet interface.
 

Obtain Network Configuration	Static
Switches	999
- Ethernet Port 1:** A table showing configuration for the first Ethernet port.
 

Interface State	Enabled
Link Status	Active
Speed	1000 Mbps
Duplex	Full Duplex
Autonegotiate Status	Autonegotiate Speed and Duplex
- Ethernet Port 2:** A table showing configuration for the second Ethernet port.
 

Interface State	Enabled
Link Status	Inactive
Speed	
Duplex	
Autonegotiate Status	

At the bottom of the main content area, there is a 'Seconds Between Refresh' field set to 15, with a 'Disable Refresh with 0.' option. The footer of the page contains the copyright notice: 'Copyright © 2015 Rockwell Automation, Inc. All Rights Reserved.'

## Ethernet Statistics

The Ethernet Statistics diagnostic web page shows the status of communication activity on the Ethernet network. The most commonly monitored fields are described in [Table 11](#).

5069-AENTR/A

Expand Minimize

Diagnostic Overview Network Settings Application Connections Bridge Connections Ethernet Statistics Ring Statistics

Home  
Diagnostics  
Diagnostic Overview  
Network Settings  
Application Connections  
Bridge Connections  
Ethernet Statistics  
Ring Statistics  
Advanced Diagnostics  
Browse Chassis

Ethernet Port 1		Ethernet Port 2	
Interface State	Enabled	Interface State	Enabled
Link Status	Active	Link Status	Inactive
Speed	1000 Mbps	Speed	
Duplex	Full Duplex	Duplex	
Autonegotiate Status	Autonegotiate Speed and Duplex	Autonegotiate Status	
Media Counters Port 1		Media Counters Port 2	
Alignment Errors	0	Alignment Errors	0
FCS Errors	0	FCS Errors	0
Single Collisions	0	Single Collisions	0
Multiple Collisions	0	Multiple Collisions	0
SQE Test Errors	0	SQE Test Errors	0
Deferred Transmissions	0	Deferred Transmissions	0
Late Collisions	0	Late Collisions	0
Excessive Collisions	0	Excessive Collisions	0
MAC Transmit Errors	0	MAC Transmit Errors	0
Carrier Sense Errors	0	Carrier Sense Errors	0
Frame Too Long	0	Frame Too Long	0
MAC Receive Errors	0	MAC Receive Errors	0
Interface Counters			
In Octets	0		
In Ucast Packets	0		
In NUCast Packets	18		
In Discards	0		
In Packet Drops	0		
In Errors	0		
In Unknown Protos	0		
Out Octets	11124		
Out Ucast Packets	0		
Out NUCast Packets	82		
Out Discards	0		
Out Errors	0		

**Table 11 - Ethernet Statistic Fields**

Field	Specifies
<b>Ethernet Port 1 and Ethernet Port 2</b>	
Interface State	Whether the port is turned off or on. Active or inactive indicates whether there is a cable that is connected.
Link Status	Whether the port is blocked for DLR protocol frames.
Speed	Whether the Ethernet port is operating at 10 Mbps, 100 Mbps, or 1 Gbps.
Duplex	If the Ethernet port is operating at full-duplex mode.
Autonegotiate Status	Whether the port speed and Duplex mode were determined via autonegotiation or whether they were manually configured.
<b>Media Counters Port 1 and Port 2</b>	
Alignment Errors	A frame containing bits that do not total an integral multiple of eight.
FCS Errors	A frame containing eight bits, at least one of which has been corrupted.
Single Collisions	The number of outgoing packets that encountered only one collision during transmission.
Multiple Collisions	The number of outgoing packets that encountered 2 . . . 15 collisions during transmission.
SQE Test Errors	A test to detect the collision-present circuit between a transceiver and a network interface card (NIC). <b>IMPORTANT:</b> Because most NICs now have an integrated transceiver, the SQE test is unnecessary. Ignore this media counter.
Deferred Transmissions	The number of outgoing packets whose transmission is deferred because the network is busy when the first attempt is made to send them.
Late Collisions	The number of times two devices transmit data simultaneously.
Excessive Collisions	The number of frames that experience 16 consecutive collisions.
MAC Transmit Errors	Frames for which transmission fails due to an internal MAC sublayer transmit error.
Carrier Sense Errors	Times that the carrier sense condition was lost or never asserted when attempting to transmit a frame.
Frame Too Long	The number of incoming packets that exceed the maximum Ethernet packet size.
MAC Receive Errors	Frames for which reception on the Ethernet interface failed due to an internal MAC sublayer receive error.
<b>Interface Counters</b>	
In Octets	Octets received on the Ethernet interface
In Ucast Packets	Unicast packets received on the Ethernet interface
In NUCast Packets	Non-unicast packets received on the Ethernet interface
In Discards	Inbound packets received on the Ethernet interface but discarded
In Packet Drops	The number of incoming packet drops on all interfaces, including backplanes, that are caused by overloading one or more adapter CPUs with high network traffic.
In Errors	Inbound packets that contain errors (does not include In Discards)
In Unknown Protos	Inbound packets with unknown protocol
Out Octets	Octets sent on the Ethernet interface
Out Ucast Packets	Unicast packets sent on the Ethernet interface
Out NUCast Packets	Non-unicast packets sent on the Ethernet interface
Out Discards	Outbound packets discarded
Out Errors	Outbound packets that contain errors

## Ring Statistics

The Ring Statistics diagnostic web page shows the status of the Device Level Ring.

The screenshot displays the 'Ring Statistics' diagnostic web page for a Rockwell Automation device. The page is titled '5069-AEN2TR/A\_LnxMain\_152' and features the Allen-Bradley and Rockwell Automation logos. A left-hand navigation pane lists various diagnostic options, with 'Ring Statistics' currently selected. The main content area is divided into several sections:

- Network:**
  - Network Topology: Linear / Star
  - Network Status: Normal
- Ring Supervisor:**
  - Ring Supervisor Mode: Disabled
  - Ring Supervisor Status: No Ring
  - Ring Protocol Participants Count: 0
  - Ring Faults Detected: 0
- Ring Advanced Config:**
  - Beacon Interval: 400
  - Beacon Timeout: 1960
  - Supervisor Precedence: 0
  - Protocol VLAN ID: 0
- Ring Fault Location:**

Ring Fault Location	IP	MAC
Last Active Node on Port 1	0.0.0.0	000000000000
Last Active Node on Port 2	0.0.0.0	000000000000
- Active Ring Supervisor:**

Address	0.0.0.0 000000000000
Precedence	0

At the bottom of the main content area, there is a refresh control: 'Seconds Between Refresh: 15' with a 'Disable Refresh with 0.' option.

Copyright © 2015 Rockwell Automation, Inc. All Rights Reserved.

## Reset the Adapter

You can reset 5069 Compact I/O EtherNet/IP adapters to their factory default values. There are differences in the required tasks to reset the adapters.

### Reset the 5069-AENTR EtherNet/IP Adapter

To reset the 5069-AENTR adapter, complete the following steps.

1. Power down the adapter.
2. Set the rotary switches to 888.
3. Power up the adapter.
4. Wait for the adapter power-up sequence to complete.

The power-up sequence is complete, and the adapter has returned to its factory default setting when the status indicator states are as follows:

- OK indicator - Flashing red
- All other indicators - Alternating between red and green

5. Power down the adapter.
6. Set the rotary switches to the desired address.

---

**IMPORTANT** If you do not want to set the IP address via the rotary switches, set them to 999.

After the adapter powers up, set the IP address in one of the methods that are described in [Set the IP Address on the Adapter on page 38](#).

---

7. Power up the adapter.



## Reset the 5069-AEN2TR EtherNet/IP Adapter

You can reset the 5069-AEN2TR EtherNet/IP adapter to its factory default values with the reset button.




**ATTENTION:** When you reset a module, all connections to or through the module are closed, and can result in loss of control.



**WARNING:** When you press the reset button while power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

1. Power down the adapter.
2. Open the front door on the adapter.
3. Use a small tool or screwdriver to press and hold the reset button.
4. While holding in the reset button, power up the adapter.
5. Continue to hold the reset button while the 4-character display cycles through TEST, DFLT, 4, 3, 2, 1.
6. Factory Default scrolls one time across the display.
7. Release the reset button.

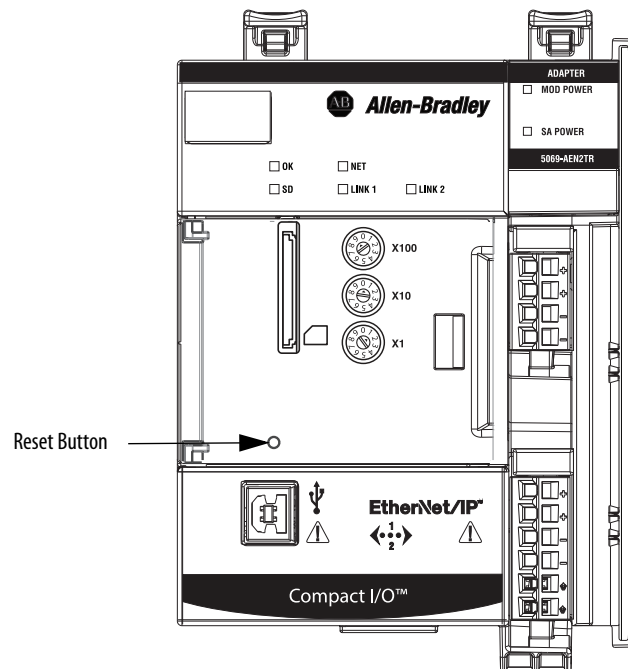

## **Notes:**


## EtherNet/IP Communication Module Status Indicators

EtherNet/IP communication modules have multi-character displays and status indicators to assist with performance and diagnostics.

### 5069-AENTR Adapter Status Indicators

[Figure 9](#) shows the 5069-AENTR adapter status indicators.

**Figure 9 - 5069-AENTR Adapter Status Indicators**

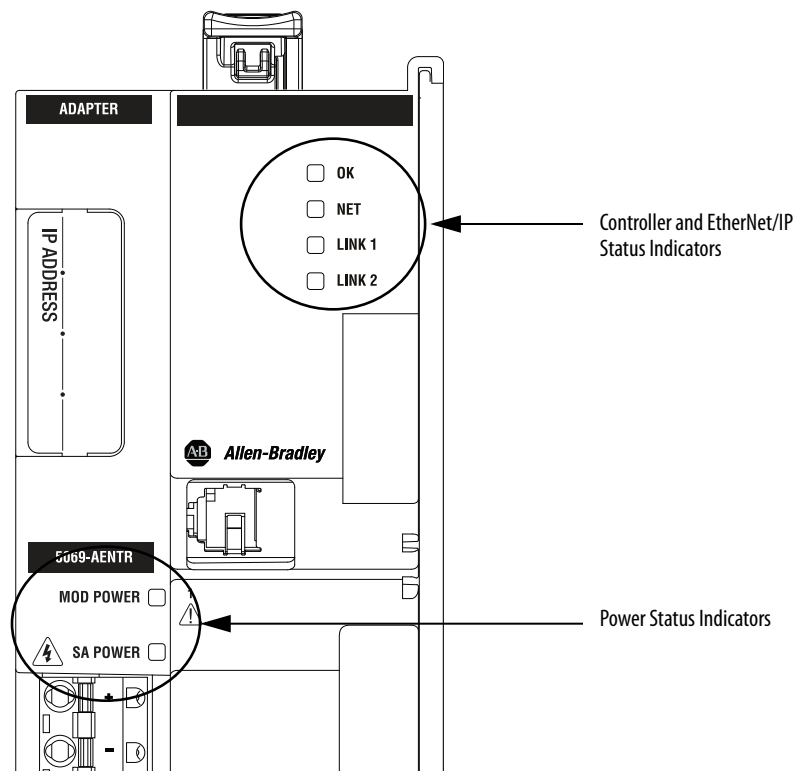

[Table 12](#) describes the 5069-AENTR adapter status indicators.

**Table 12 - 5069-AENTR Status Indicators**

Indicator	State	Description	Recommended Action
OK	Off	There is no power applied to the device.	Apply power as necessary
	Steady green	The device is operating in a normal condition.	None
	Flashing red	One of the following: <ul style="list-style-type: none"> <li>The device has a recoverable fault. The fault can be read from the diagnostic web pages that are described on <a href="#">page 85</a>.</li> <li>A firmware update is being performed on the device.</li> <li>The adapter has powered up and is in the Factory Default state. In this case, all of the other indicators flash red and green.</li> </ul>	One of the following: <ul style="list-style-type: none"> <li>Cycle power.</li> <li>Wait for the firmware update to finish.</li> <li>Use adapter as necessary.</li> </ul>
	Steady red	The device has an unrecoverable fault.	Cycle power. If the fault persists, replace the device.
NET	Off	The device is not configured, or does not have an IP address.	Configure the device or assign an IP address. For more information on how to configure the 5069-AENTR adapter and assign an IP address, see Chapter 3, <a href="#">Configure an EtherNet/IP Communication Module on page 35</a> .
	Flashing green	The device has an IP address, but no active connections are established.	Establish connections as required by the project.
	Steady green	The device has an IP address and at least one established active connection.	None
	Steady red	There is a Duplicate IP Address condition or invalid configuration.	Troubleshoot the issue and remedy the cause. For example, if a Duplicate IP address condition exists, determine which devices on the network use the same IP address and change the IP addresses to unique values.
	Flashing red and green	The device has powered up and is in the Factory Default state. In this case, the OK indicator is flashing red and all of the other indicators flash red and green.	Use adapter as necessary.
LINK1	Off	No activity. One of these conditions exists: <ul style="list-style-type: none"> <li>The module is not powered.</li> <li>The RJ45 cables are properly seated in the adapter and connected devices.</li> <li>No link exists on the port.</li> <li>The port is administratively disabled.</li> </ul>	One of the following: <ul style="list-style-type: none"> <li>If there is no power to the device, complete one of the following: <ul style="list-style-type: none"> <li>Turn on power.</li> <li>Verify that the module RTB is properly seated in the adapter. <b>IMPORTANT:</b> Before you touch the module RTB, verify that power is not applied to the adapter. Once the module RTB is properly seated, turn on power.</li> </ul> </li> <li>Verify that the RJ45 cables are properly seated in the adapter and connected devices.</li> <li>If there is power to the device but no link exists, troubleshoot the issue and remedy the cause.</li> <li>If the port is administratively disabled, confirm that is the desired state. If not, use RSLinx Classic software or the Logix Designer application to enable the port.</li> </ul>
	Flashing green	Activity exists on the port.	None
	Flashing red and green	The device has powered up and is in the Factory Default state. In this case, the OK indicator is flashing red and all of the other indicators flash red and green.	Use adapter as necessary.

**Table 12 - 5069-AENTR Status Indicators**

Indicator	State	Description	Recommended Action
LINK2	Off	<p>No activity. One of these conditions exists:</p> <ul style="list-style-type: none"> <li>The module is not powered.</li> <li>The RJ45 cables are properly seated in the adapter and connected devices.</li> <li>No link exists on the port.</li> <li>The port is administratively disabled.</li> <li>The port is disabled due to rapid ring faults.</li> <li>The port configuration is configured in a manner that can result in issues. For example, the port can be configured to Autonegotiate and the port at the other end of the cable is configured such that Autonegotiate is disable.</li> </ul>	<p>One of the following:</p> <ul style="list-style-type: none"> <li>If there is no power to the device, complete one of the following: <ul style="list-style-type: none"> <li>Turn on power.</li> <li>Verify that the module RTB is properly seated in the adapter.</li> </ul> <p><b>IMPORTANT:</b> Before you touch the module RTB, verify that power is not applied to the adapter. Once the module RTB is properly seated, turn on power.</p> </li> <li>Verify that the RJ45 cables are properly seated in the adapter and connected devices.</li> <li>If there is power to the device but no link exists, troubleshoot the issue and remedy the cause.</li> <li>If the port is administratively disabled, confirm that is the desired state. If not, use RSLinx Classic software or the Logix Designer application to enable the port.</li> <li>If the port is disabled due to rapid ring faults, troubleshoot the cause of the fault and remedy it.</li> <li>Check configuration for the links at both ends of the cable and verify that they are correct to perform normal operation.</li> </ul>
	Flashing green	Activity exists on the port.	None
	Steady green	Adapter is the supervisor of a Device Level Ring network.	None
	Flashing red and green	The device has powered up and is in the Factory Default state. In this case, the OK indicator is flashing red and all of the other indicators flash red and green.	Use adapter as necessary.
MOD Power	Off	There is no Module Power applied to the device.	Apply MOD Power as necessary
	Steady green	Module Power is present.	None
	Flashing red and green	The device has powered up and is in the Factory Default state. In this case, the OK indicator is flashing red and all of the other indicators flash red and green.	Use adapter as necessary.
SA Power	Off	Status of SA Power is unknown.	Apply SA Power as necessary
	Steady green	SA Power is present.	None
	Flashing red and green	The device has powered up and is in the Factory Default state. In this case, the OK indicator is flashing red and all of the other indicators flash red and green.	Use adapter as necessary.

## 5069-AEN2TR Adapter Status Indicators

Figure 10 shows the 5069-AEN2TR adapter status indicators.

Figure 10 - 5069-AEN2TR Adapter Status Indicators

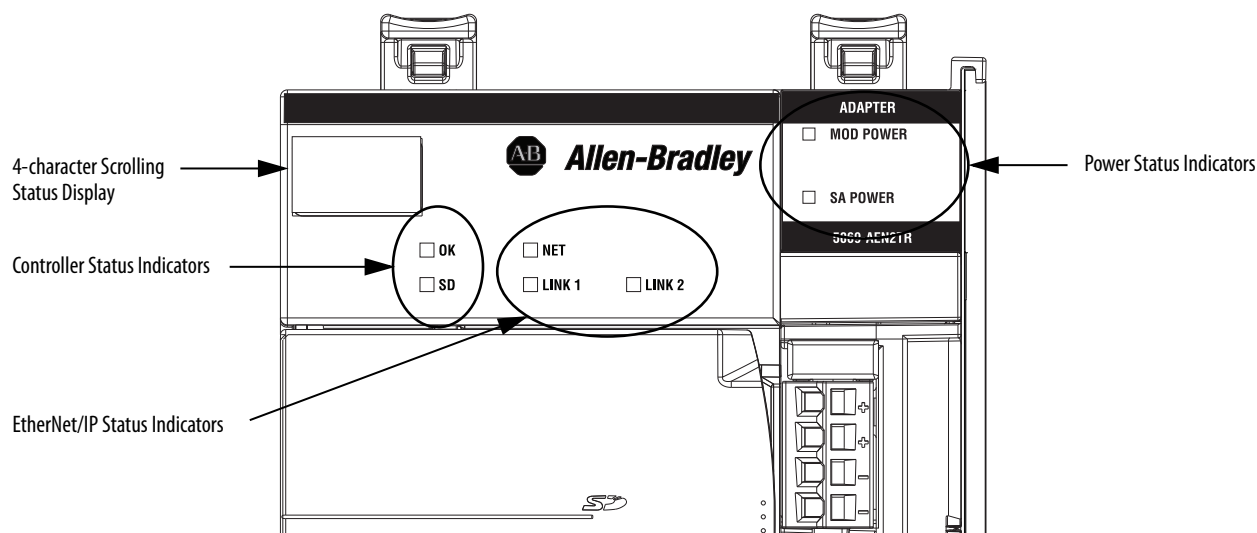


Table 13 describes the 5069-AEN2TR adapter status indicators.

Table 13 - 5069-AEN2TR Status Indicators

Indicator	State	Description	Recommended Action
OK	Off	There is no power applied to the device.	Apply power as necessary
	Steady green	The device is operating in a normal condition.	None
	Flashing red	One of the following: <ul style="list-style-type: none"> <li>The device has a recoverable fault. The fault can be read from the device through the USB or Ethernet ports.</li> <li>A firmware update is being performed on the device.</li> </ul>	One of the following: <ul style="list-style-type: none"> <li>Cycle power.</li> <li>Wait for the firmware update to finish.</li> </ul>
	Steady red	The device has an unrecoverable fault.	Cycle power. If the fault persists, replace the device.
SD	Off	There is no activity to the SD card.	None
	Flashing green	The controller is reading from, or writing to the SD card.	None
	Steady red	The SD card does not have a valid file system.	None
NET	Off	The device is not configured, or does not have an IP address.	Configure the device or assign an IP address.
	Flashing green	The device has an IP address, but no active connections are established.	Establish connections as required by the project.
	Steady green	The device has an IP address and at least one established active connection.	None
	Steady red	There is a Duplicate IP Address condition or invalid configuration.	Troubleshoot the issue and remedy the cause. For example, if a Duplicate IP address condition exists, determine which devices on the network use the same IP address and change the IP addresses to unique values.

**Table 13 - 5069-AEN2TR Status Indicators**

Indicator	State	Description	Recommended Action
LINK1	Off	No activity. One of these conditions exists: <ul style="list-style-type: none"> <li>• The module is not powered.</li> <li>• The RJ45 cables are properly seated in the adapter and connected devices.</li> <li>• No link exists on the port.</li> </ul>	One of the following: <ul style="list-style-type: none"> <li>• If there is no power to the device, complete one of the following:               <ul style="list-style-type: none"> <li>– Turn on power.</li> <li>– Verify that the module RTB is properly seated in the adapter.</li> </ul> <b>IMPORTANT:</b> Before you touch the module RTB, verify that power is not applied to the adapter. Once the module RTB is properly seated, turn on power.             </li> <li>• Verify that the RJ45 cables are properly seated in the adapter and connected devices.</li> <li>• If there is power to the device but no link exists, troubleshoot the issue and remedy the cause.</li> </ul>
	Flashing green	Activity exists on the port.	None
LINK2	Off	No activity. One of these conditions exists: <ul style="list-style-type: none"> <li>• The module is not powered.</li> <li>• The RJ45 cables are properly seated in the adapter and connected devices.</li> <li>• No link exists on the port.</li> <li>• The port is administratively disabled.</li> <li>• The port is disabled due to rapid ring faults.</li> </ul>	One of the following: <ul style="list-style-type: none"> <li>• If there is no power to the device, complete one of the following:               <ul style="list-style-type: none"> <li>– Turn on power.</li> <li>– Verify that the module RTB is properly seated in the adapter.</li> </ul> <b>IMPORTANT:</b> Before you touch the module RTB, verify that power is not applied to the adapter. Once the module RTB is properly seated, turn on power.             </li> <li>• Verify that the RJ45 cables are properly seated in the adapter and connected devices.</li> <li>• If there is power to the device but no link exists, troubleshoot the issue and remedy the cause.</li> <li>• If the port is administratively disabled, confirm that is the desired state.</li> <li>• If the port is disabled due to rapid ring faults, troubleshoot the cause of the fault and remedy it.</li> </ul>
	Flashing green	Activity exists on the port.	None
	Steady green	Adapter is the supervisor of a Device Level Ring network.	None
MOD Power	Off	There is no Module Power applied to the device.	Apply MOD Power as necessary
	Steady green	Module Power is present.	None
SA Power	Off	Status of SA Power is unknown.	Apply SA Power as necessary
	Steady green	SA Power is present.	None

[Table 14](#) describe the possible messages on the 4-character display for a 5069-AEN2TR adapter.

**Table 14 - Messages on 4-character Display**

Message Type	Example Message on 4-character Display	Description
TEST	TEST	Message appears while power-up tests run.
PASS	PASS	Message appears when power-up tests complete.
Embedded software version	Rev 2.003	Message appears once, after the power-up tests complete successfully.
OK	OK	The first message in the scrolling message display. Message scrolls continuously during operation.
Port Down	Link 2 - Port Down	Message appears when an EtherNet/IP port does not have a connection. Message scrolls continuously during operation.
Port Rate/Duplex State	Port 1 - 1Gb/FULL	The current port rate and duplex state. Message scrolls continuously during operation. If not connected to a 1 Gb switch, the message shows 100/FULL.
IP Address	192.168.1.17	The IP address of the adapter. Message scrolls continuously during operation.
Link Disabled	Port 2 - Link Disabled	Message appears when you have disabled an EtherNet/IP port. Message scrolls continuously during operation.
Duplicate IP	Duplicate IP - 00:00:BC:02:34:B4	Message appears when the adapter detects a device with the same IP Address on the network. The message shows the MAC ID of the device with the duplicate IP Address. Message scrolls continuously during operation.
Fault	Cycle power to unit.	Message appears, and scrolls continuously, during a fault.



## Module Tags

Module tags are created when you add an EtherNet/IP communication module to the Logix Designer application project, and set the connection to Status.

**Table 15 - 5069 Compact I/O™ EtherNet/IP Adapter Module Tags**

Tag Name	Data Type	Definition	Valid Values
RunMode	BOOL	Module's operating state	<ul style="list-style-type: none"> <li>0 = Idle</li> <li>1 = Run</li> </ul>
ConnectionFaulted	BOOL	Indicates if a connection to the target is running. The module always returns a zero in this member. The controller overwrites the zero with a one when the connection is not up.	<ul style="list-style-type: none"> <li>0 = Connection running</li> <li>1 = Connection not running</li> </ul>
DiagnosticActive	BOOL	Indicates if any diagnostics are active or if the prognostics threshold is reached.	<ul style="list-style-type: none"> <li>0 = No diagnostics active</li> <li>1 = One or more diagnostics are active or the prognostics threshold is reached</li> </ul>
CIPSyncValid	BOOL	Indicates if the module is synced with a 1588 master.	<ul style="list-style-type: none"> <li>0 = Module is not synced</li> <li>1 = Module is synced</li> </ul>
CIPSyncTimeout	BOOL	Indicates if the module was once synced with a 1588 master, but is not now due to a timeout.	<ul style="list-style-type: none"> <li>0 = A valid time master has not timed out.</li> <li>1 = A valid time master was detected on the backplane, but the time master has timed out. The module is using its local clock and can be drifting away from the last known time master.</li> </ul>
DiagnosticSequenceCount	SINT	Increments for each time a distinct diagnostic condition is detected, and when a distinct diagnostic condition transitions from detected to not detected. Set to zero by product reset or power cycle. Wraps from 255 (-1) to 1 skipping zero.	-128...127 The value of 0 is skipped except during module power-up.
OverTemperature	BOOL	Indicates if the module is at its maximum thermal rating. <b>IMPORTANT:</b> This tag is always 0 with the 5069-AENTR adapter.	<ul style="list-style-type: none"> <li>0 = Module is not at its maximum thermal rating</li> <li>1 = Module is at its maximum thermal rating</li> </ul>
CriticalTemperature	BOOL	Indicates if the temperature is approaching (but below) the point of thermal runaway. <b>IMPORTANT:</b> This tag is always 0 with the 5069-AENTR adapter.	<ul style="list-style-type: none"> <li>0 = Temperature is not approaching the point of thermal runaway</li> <li>1 = Temperature is approaching the point of thermal runaway</li> </ul>
Port1Connected	BOOL	Indicates if the numbered Ethernet port is active.	<ul style="list-style-type: none"> <li>0 = Ethernet port is not active</li> <li>1 = Ethernet port is active</li> </ul>
Port2Connected	BOOL	Indicates if the numbered Ethernet port is active.	<ul style="list-style-type: none"> <li>0 = Ethernet port is not active</li> <li>1 = Ethernet port is active</li> </ul>
Port1FullDuplex	BOOL	Indicates if the numbered Ethernet port, if it is connected, is running full-duplex mode or half-duplex mode.	<ul style="list-style-type: none"> <li>0 = Ethernet port is running in half-duplex mode</li> <li>1 = Ethernet port is running in full-duplex mode</li> </ul>

Table 15 - 5069 Compact I/O™ EtherNet/IP Adapter Module Tags

Tag Name	Data Type	Definition	Valid Values
Port2FullDuplex	BOOL	Indicates if the numbered Ethernet port, if it is connected, is running full-duplex mode or half-duplex mode.	<ul style="list-style-type: none"> <li>0 = Ethernet port is running in half-duplex mode</li> <li>1 = Ethernet port is running in full-duplex mode</li> </ul>
Port1AutoNegotiationStatus	SINT	Indicates the status of link auto-negotiation	<ul style="list-style-type: none"> <li>0 = Auto-negotiation in progress.</li> <li>1 = Auto-negotiation and speed detection failed. Using default values for speed and duplex. Default values are product-dependent; recommended defaults are 10 Mbps and half-duplex.</li> <li>2 = Auto negotiation failed, but detected speed. Duplex was defaulted. Default value is product-dependent; recommended default is half-duplex mode.</li> <li>3 = Successfully negotiated speed and duplex mode.</li> <li>4 = Auto-negotiation not attempted. Forced speed and duplex mode.</li> </ul>
Port2AutoNegotiationStatus	SINT	Indicates the status of link auto-negotiation	<ul style="list-style-type: none"> <li>0 = Auto-negotiation in progress.</li> <li>1 = Auto-negotiation and speed detection failed. Using default values for speed and duplex. Default values are product-dependent; recommended defaults are 10 Mbps and half-duplex.</li> <li>2 = Auto negotiation failed, but detected speed. Duplex was defaulted. Default value is product-dependent; recommended default is half-duplex mode.</li> <li>3 = Successfully negotiated speed and duplex mode.</li> <li>4 = Auto-negotiation not attempted. Forced speed and duplex mode.</li> </ul>
Port1Speed	INT	Indicates the actual port speed in Mbps.	10, 100, 1000
Port2Speed	INT	Indicates the actual port speed in Mbps.	10, 100, 1000
TCPConnections	INT	The number of TCP/IP connections currently open to the adapter.	All positive values
CIPConnections	INT	The number of CIP connections currently open to and through the adapter.	All positive values
CIPLostPackets	DINT	A running sum of the number of Sequenced Address Item Sequence Numbers that are skipped in Class 0 and Class 1 connections that are consumed by the adapter and its children.	All positive values
CIPTimeouts	DINT	A running count of the number of connections that time out, both originated and targeted, and connections to and through the adapter.	All positive values

**Table 15 - 5069 Compact I/O™ EtherNet/IP Adapter Module Tags**

Tag Name	Data Type	Definition	Valid Values
HMIPacketRate	DINT	The number of Class 3 packets and unconnected packets that are sent and received by the device in the previous second.	All
IOPacketRate	DINT	The number of class 0 and class 1 packets transmitted or received by the adapter in the previous second.	All positive values
EthernetErrors	DINT	The sum over all ports of the Ethernet Link object values: In Discards, In Errors, In Unknown Protos, Out Discards, Out Errors, Alignment Errors, FCS Errors, Single Collisions, Multiple Collisions, SQE Test Errors, Deferred Transmissions, Late Collisions, Excessive Collisions, MAC Transmit Errors, Carrier Sense Errors, Frame Too Long, and MAC Receive Errors.	All positive values
CPUUtilization	INT	The percentage of the capacity of the product's compute engine (whether that is a CPU, or a core of a CPU, or a thread) most important to the performance of communication of packets by the product. The value equals the percentage.	0...100
DLRNetworkState	SINT	The current value of the Network Status instance attribute of the DLR object for devices with multiple Ethernet ports that support DLR.	0 - Normal 1 - Ring Fault 2 - Unexpected Loop Detected 3 - Partial Network Fault 4 - Rapid Fault/Restore Cycle
DLRSupervisorState	SINT	The current value of the Ring Supervisor Status instance attribute of the DLR object for devices with multiple Ethernet ports that support DLR.	0 - Device is functioning as a backup 1 - Device is functioning as the active ring supervisor 2 - Device is functioning as a normal ring node 3 - Device is operating in a non-DLR topology 4 - Device cannot support the current ring parameters (Beacon Interval and Beacon Timeout)
MemoryCardFault  This tag is only available with the 5069-AEN2TR adapter.	BOOL	Indicates if an SD card fault was detected. Either of the following conditions can trigger the fault: <ul style="list-style-type: none"> <li>When there is not an SD card in the SD card slot.</li> <li>When a corrupted write on SD card was detected.</li> </ul>	0 - No fault 1 - SD card fault detected
MemoryCardDataMismatch  This tag is only available with the 5069-AEN2TR adapter.	BOOL	Indicates that there is a difference between the configuration that is stored on the adapter and the configuration that is stored on the SD card.	0 - No fault 1 - SD card data mismatch detected
LocalClockOffset	LINT	The offset from the local clock to the system time. This value helps to detect steps in time. This value updates when a PTP update is received.	All
LocalClockOffsetTimestamp	LINT	The time when the Local Clock Offset was sampled. This value is initially zero, and the first time stamp occurs when the module synchronizes with the master clock.	N/A
GrandMasterClockID	SINT[8]	The EUI-64 Identity of the CIP Sync Grandmaster clock the module is synced to.	All

## **Notes:**

## Numerics

### 4-character display

5069-AEN2TR adapter 100

### 5069 Compact I/O system

I/O modules 10

MOD power 13, 15

power system 13 - 21

SA power 13, 16 - 21

track current draw 18

### 5069-AEN2TR adapter

reset button 93

status indicators 98 - 100

4-character display 100

use SD card 11 - 12

### 5069-AENTR adapter

Protected Mode 22

reset tasks 92

status indicators 95 - 97

### 5069-FPD field potential distributor

create new SA power bus 19 - 20

## A

### additional resources 5

## B

### BOOTP/DHCP

disable with BOOTP/DHCP tool 43

disable with RSLinx Classic software 44

### BOOTP/DHCP tool

set network IP address 41 - 43

## C

### configure

communication drivers 25 - 33

DHCP server 45

EtherNet/IP communication driver 27 - 28

set network IP address 38 - 48

USB communication driver 31 - 33

with Logix Designer application 55 - 66

with RSLinx Classic software 51 - 53

workstation 25 - 33

## D

### Device Level Ring network 69

### DHCP server 35, 45

### diagnostic web page 89

### diagnostics

5069-AENTR adapter reset tasks 92

access web browser support 86

adapter web pages 85 - 91

diagnostic overview web page 87

Logix Designer application 71 - 78

connection category 72

module info category 74

port configuration category 76

time sync category 78

network settings web page 88

ring statistics web page 91

RSLinx Classic software 80 - 85

connection manager tab 83

general tab 80

port diagnostics tab 81

USB tab 84

use to troubleshoot 71 - 93

### DNS addressing 50 - 51

### domain name 36

### drivers

RSLinx Classic software 29 - 30

### duplicate address detection 49

## E

### Ethernet communication driver 27 - 28

### Ethernet statistics 89

### EtherNet/IP communication driver 27 - 28

### EtherNet/IP network

communication driver in RSLinx Classic

software 29 - 30

### example system

5069-AEN2TR adapter 10

5069-AENTR adapter 10

## G

### gateway 36

## H

### host name 36

## I

### I/O modules

with 5069 Compact EtherNet/IP adapters 10

### IP address

definition 36

duplicate address detection 49

out-of-box state 38

set with DHCP server 45

set with rotary switches 40

set with RSLinx Classic software 46 - 48

## L

### Logix Designer application

configure adapter 55 - 66

diagnostics 71 - 78

module info category 74

port configuration category 76

time sync category 78

## M

**memory**  
SD card 11 - 12  
**MOD power** 13, 15  
**mode switch** 61  
**module diagnostics**  
use to troubleshoot 71 - 93  
**module fault** 72

## N

**network parameters**  
DNS addressing 50 - 51  
domain name 36  
gateway 36  
host name 36  
IP address 36  
primary DNS address 36  
secondary DNS address 36  
subnet mask 36  
**network settings web page** 88

## O

**out-of-box state**  
IP address 38  
rotary switches 38

## P

**power a 5069 Compact I/O system** 13 - 21  
MOD power 13, 15  
SA power 13, 16 - 21  
track current draw 18  
**Protected Mode**  
5069-AENTR 22

## R

**Refresh** 75  
**reset button**  
5069-AEN2TR adapter 93  
**reset tasks**  
5069-AENTR adapter 92  
**ring statistics web page** 91  
**rotary switches** 40  
out-of-box state 38  
set IP address 40  
**RSLink Classic software**  
configure network parameters 51 - 53  
connection manager tab 83  
diagnostics 80 - 85  
disable BOOTP/DHCP 44  
Ethernet communication driver 27 - 28  
Ethernet devices driver 29 - 30  
general tab 80  
port diagnostics tab 81  
set IP address 46 - 48  
set network IP address 39  
USB communication driver 31 - 33  
USB tab 84

## S

**SA power** 13, 16 - 21  
create new power bus with 5069-FPD field  
potential distributor 19 - 20  
track current draw 18  
**SD card**  
with 5069-AEN2TR 11 - 12  
**security**  
Protected Mode  
5069-AENTR 22  
**set IP address**  
with RSLink Classic software 51 - 53  
**set network IP address**  
BOOTP/DHCP tool 41 - 43  
**software**  
Logix Designer application  
configure adapter 55 - 66  
connection category 72  
diagnostics 71 - 78  
module info category 74  
port configuration category 76  
time sync category 78  
RSLink Classic  
configure network parameters 51 - 53  
connection manager tab 83  
diagnostics 80 - 85  
Ethernet devices driver 29 - 30  
general tab 80  
port diagnostics tab 81  
USB tab 84  
**status indicators**  
5069-AEN2TR adapter 98 - 100  
4-character display 100  
5069-AENTR adapter 95 - 97  
**subnet mask** 36

## T

**troubleshoot**  
web browser support 86  
with adapter diagnostic web pages 85 - 91  
with module diagnostics 71 - 93

## U

**USB communication driver** 31 - 33

## W

**web browser support** 86



## Rockwell Automation Support

Use the following resources to access support information.

<b>Technical Support Center</b>	Knowledgebase Articles, How-to Videos, FAQs, Chat, User Forums, and Product Notification Updates.	<a href="https://rockwellautomation.custhelp.com/">https://rockwellautomation.custhelp.com/</a>
<b>Local Technical Support Phone Numbers</b>	Locate the phone number for your country.	<a href="http://www.rockwellautomation.com/global/support/get-support-now.page">http://www.rockwellautomation.com/global/support/get-support-now.page</a>
<b>Direct Dial Codes</b>	Find the Direct Dial Code for your product. Use the code to route your call directly to a technical support engineer.	<a href="http://www.rockwellautomation.com/global/support/direct-dial.page">http://www.rockwellautomation.com/global/support/direct-dial.page</a>
<b>Literature Library</b>	Installation Instructions, Manuals, Brochures, and Technical Data.	<a href="http://www.rockwellautomation.com/global/literature-library/overview.page">http://www.rockwellautomation.com/global/literature-library/overview.page</a>
<b>Product Compatibility and Download Center (PCDC)</b>	Get help determining how products interact, check features and capabilities, and find associated firmware.	<a href="http://www.rockwellautomation.com/global/support/pcdc.page">http://www.rockwellautomation.com/global/support/pcdc.page</a>

## Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the How Are We Doing? form at [http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002\\_-en-e.pdf](http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002_-en-e.pdf).

Rockwell Automation maintains current product environmental information on its website at <http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page>.

Allen-Bradley, Compact I/O, CompactLogix, FactoryTalk, Kinetix, Logix5000, PanelView, PowerFlex, Rockwell Automation, Rockwell Software, RSLinx, RSLogix 5000, RSNetWorx, Studio 5000, and Studio 5000 Logix Designer are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

**[www.rockwellautomation.com](http://www.rockwellautomation.com)**

### Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication ENET-UM004C-EN-P - February 2017

Supersedes Publication ENET-UM004B-EN-P - November 2015

Copyright © 2017 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.